



# Installation Manual


 
 
 




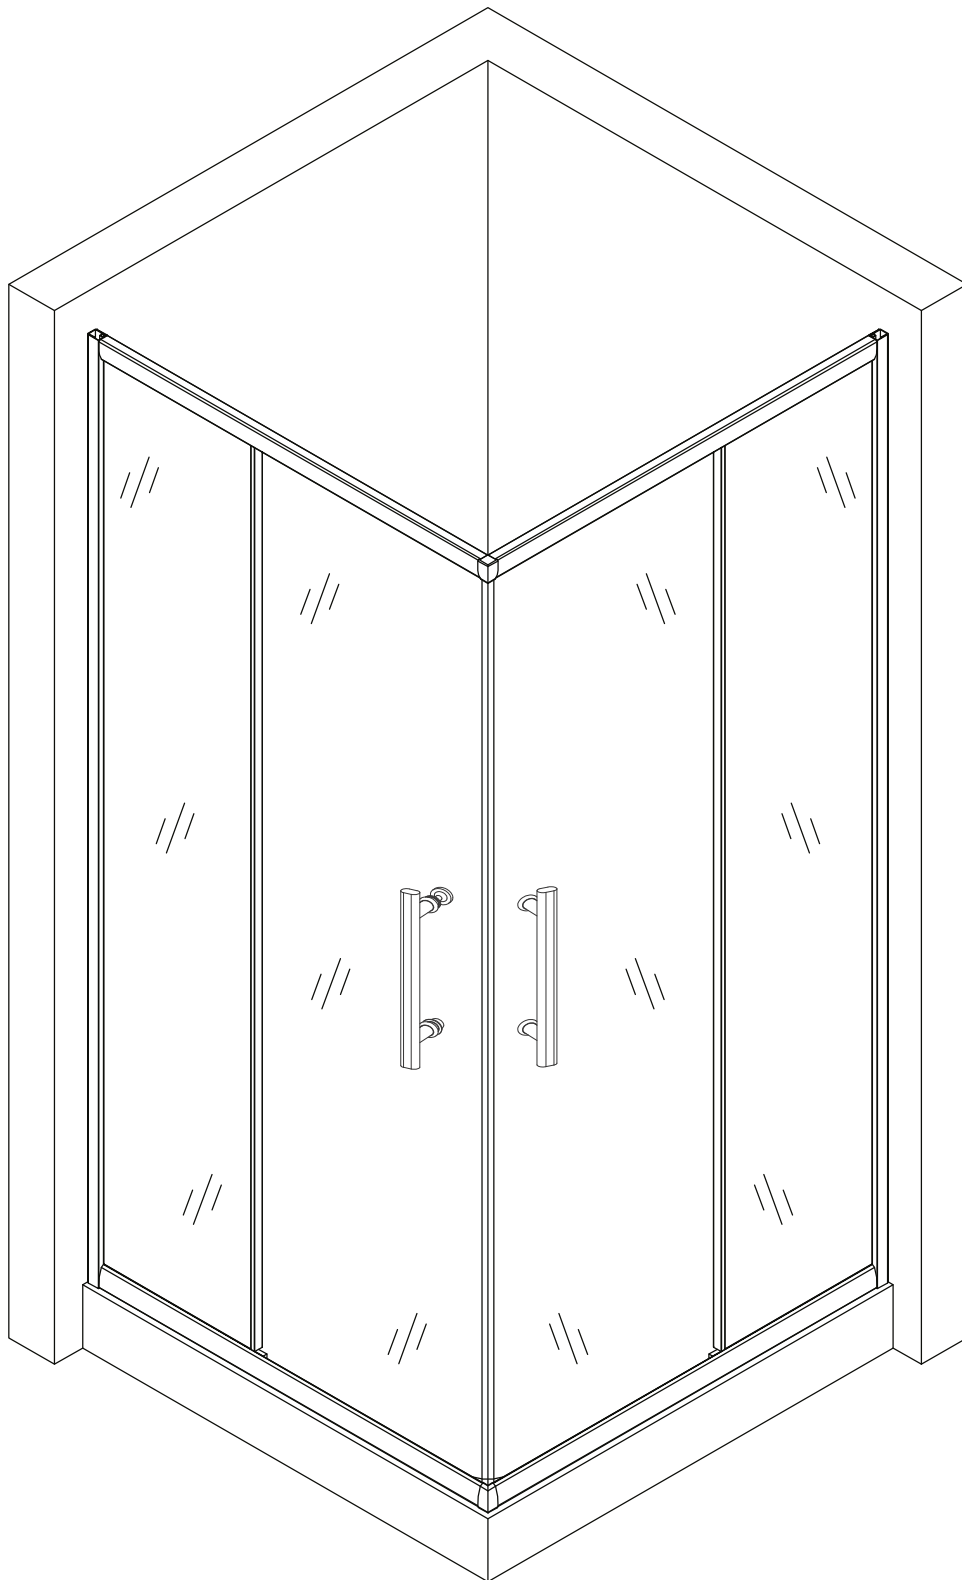

 

 


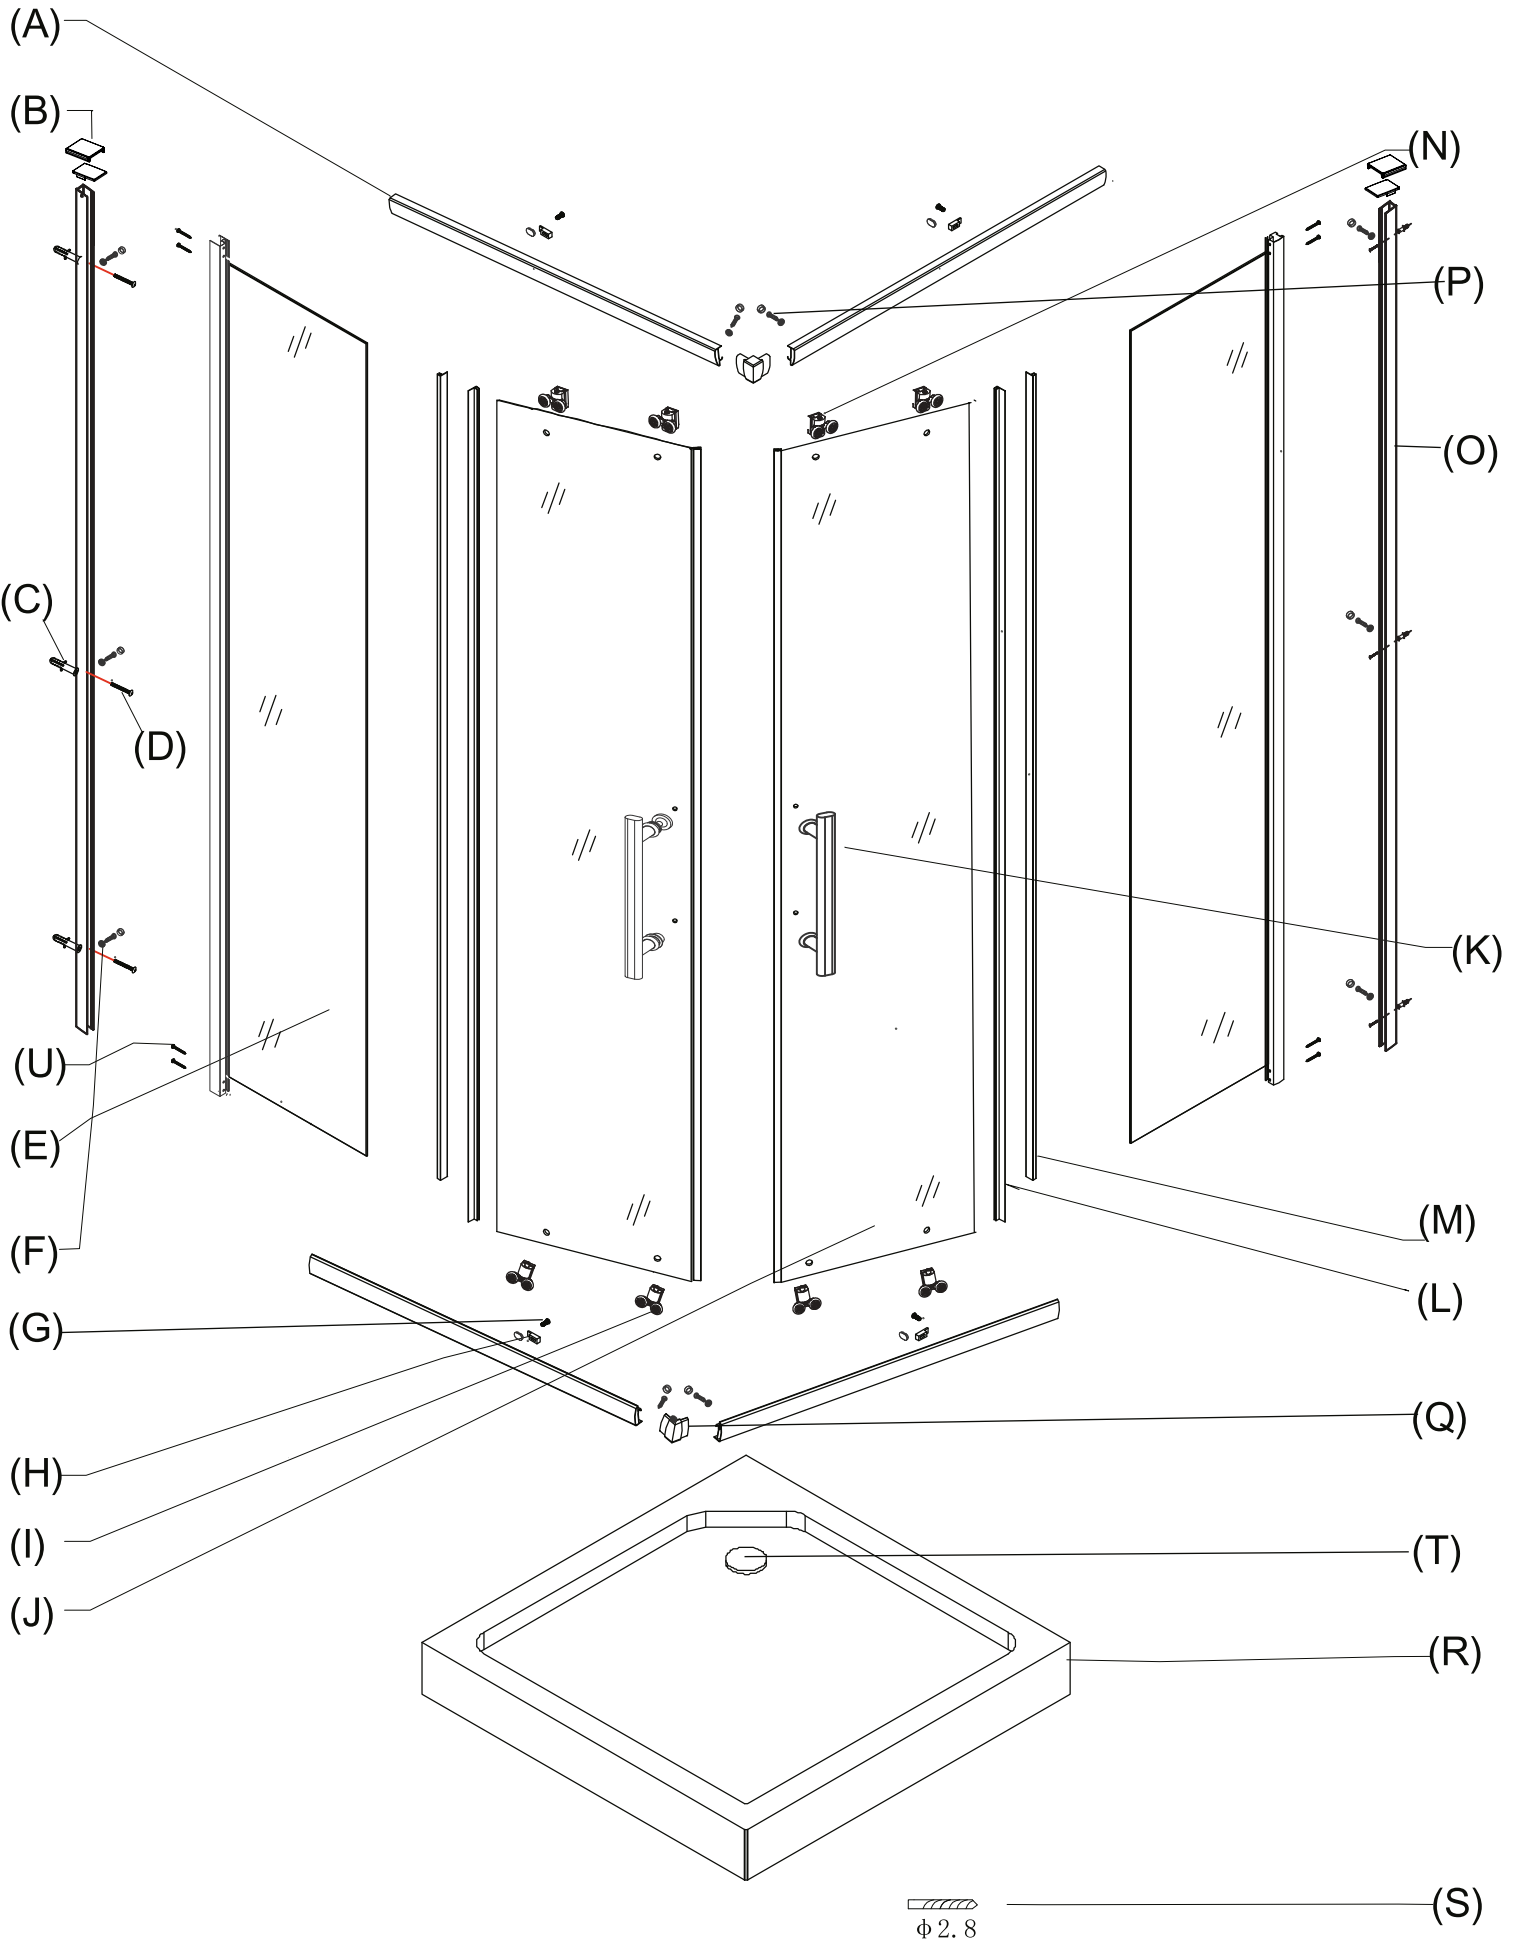


 

 


 
 


**MODEL: ESR-8024 / ESR-8034**

**SIZE: 900\*900\*2000MM**

**1000\*1000\*2000MM**



A		4	J		2	S	 φ 2.8	1
B		2	K		2	T		1
C		6	L		2	U	 ST3.5*19	8
D	 ST4*30	6	M		2			
E		2	N		4			
F		10	O		2			
G	 ST4*10	10	P	 ST4*8	4			
H		4	Q		2			
I		4	R		1			

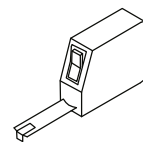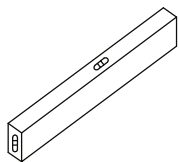

Ø6

