


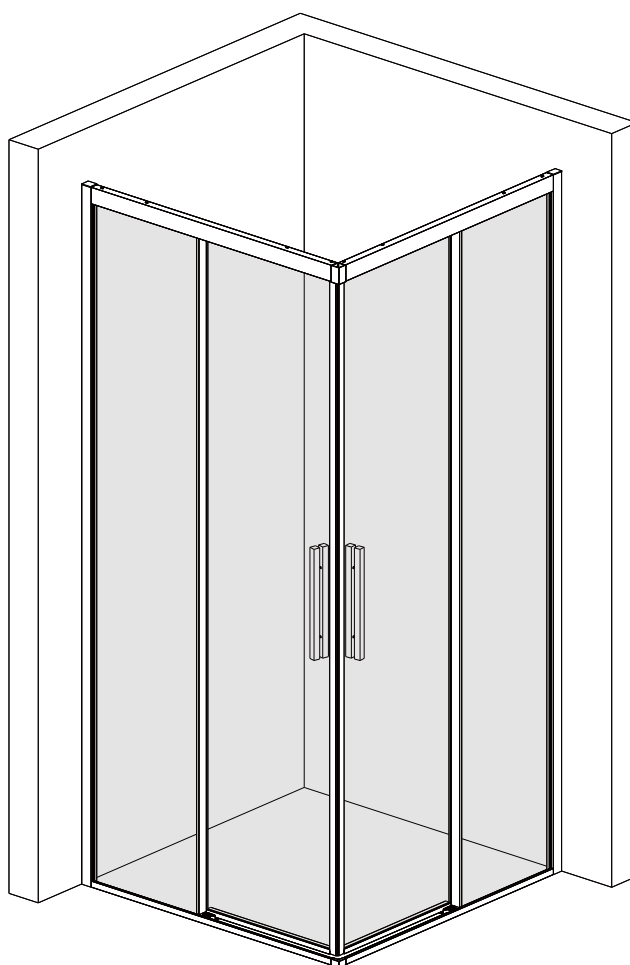
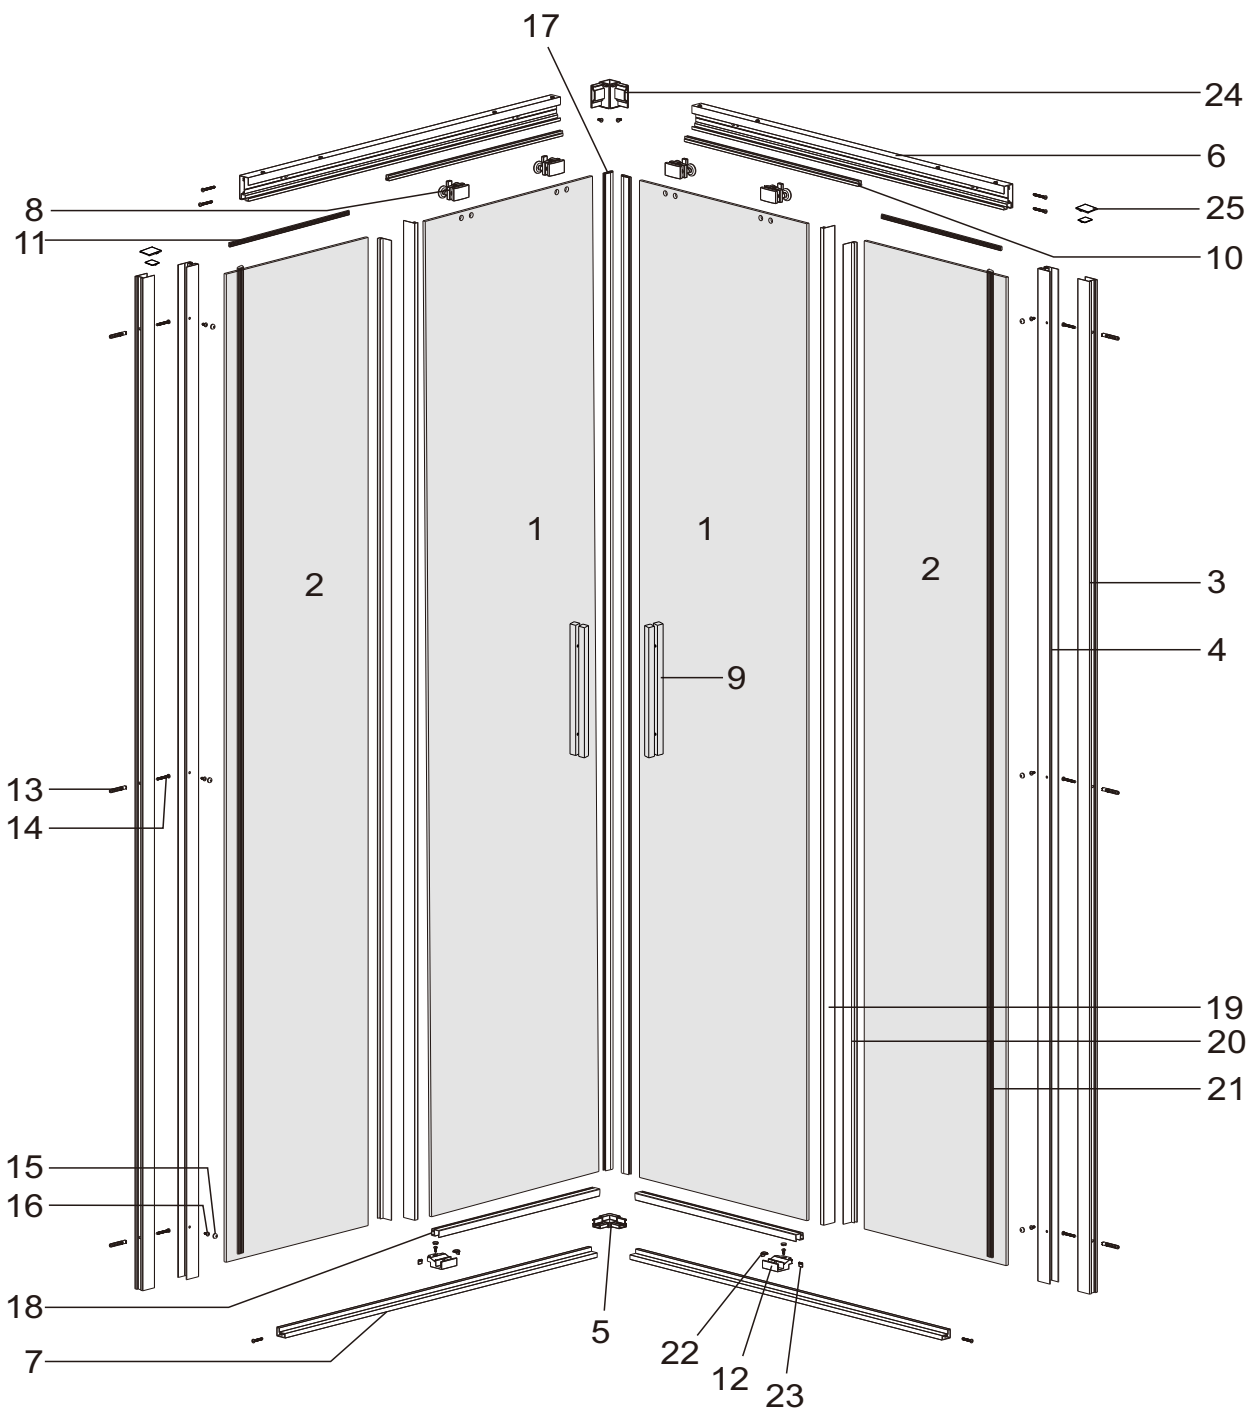
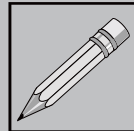


**Инструкция по установке**  
**VSS-3SO900CL/VSS-3SO900CLB**  
**VSS-3SO100CL/VSS-3SO100CLB**

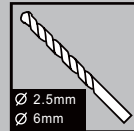

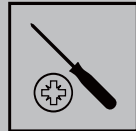

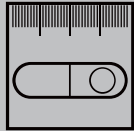

[1]




X2

[2]




X2

[3]




X2

[4]




X2

[5]



X1


[6]



X1


X1

[7]



X2

[8]




X4

[9]



X2

[10]



X2

[11]




X2

[12]



X2

[13]



X6

[14]



ST3.5X32  
X12

[15]




X8

[16]




ST3.5X9.5  
X10

[17]



X2

[18]



X2

[19]



X2

[20]




X2

[21]



X2

[22]



X2

X2

[23]




X2

[24]



X1




[25]







X2






X2






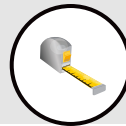
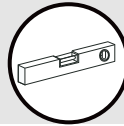
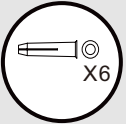




1

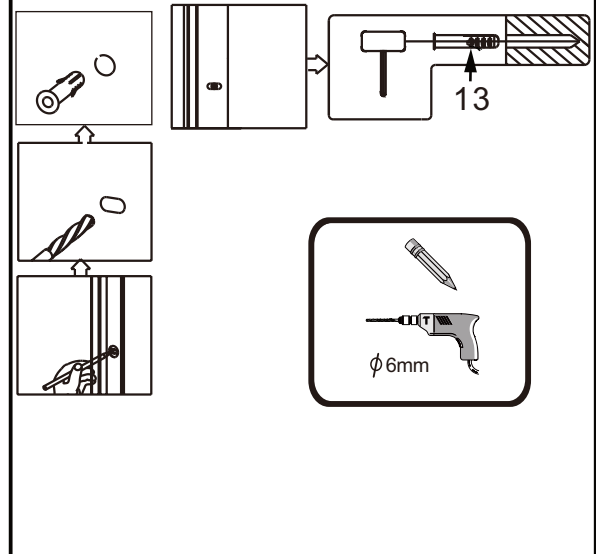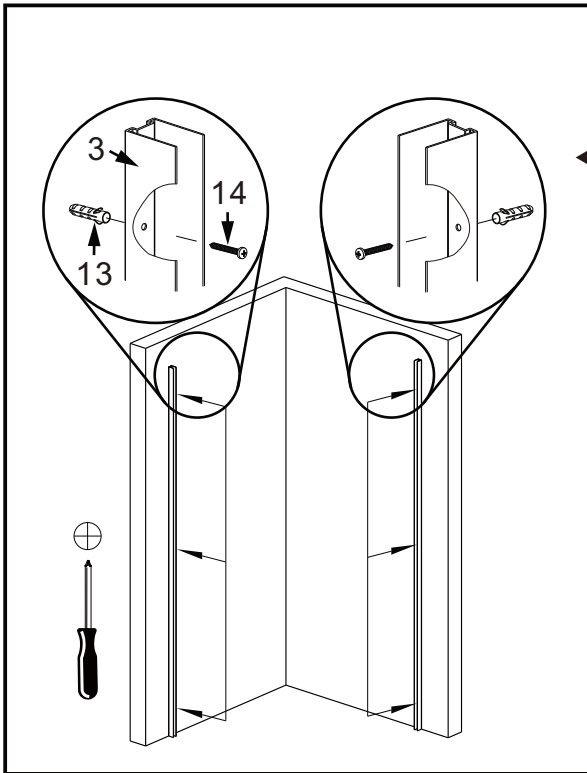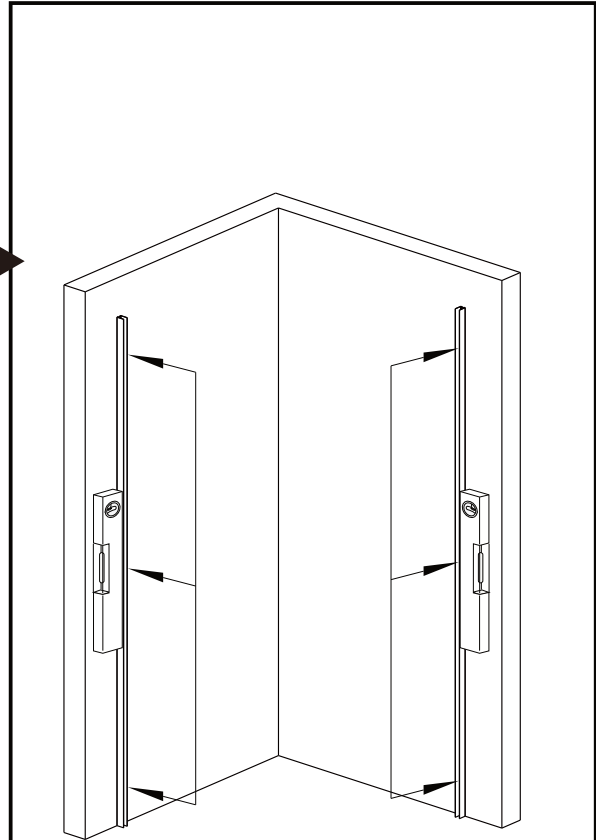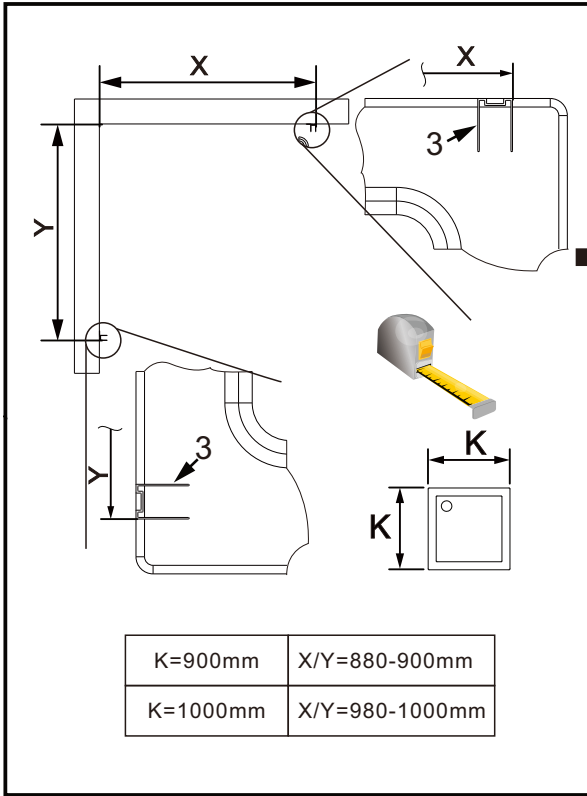

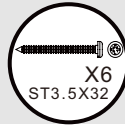
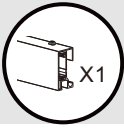
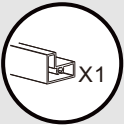



2

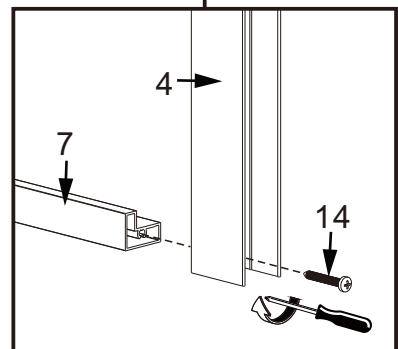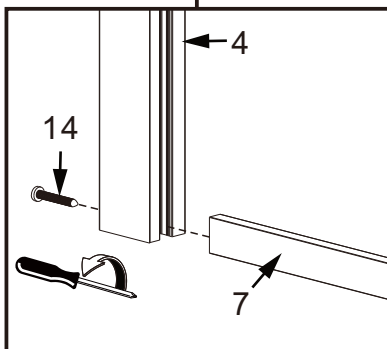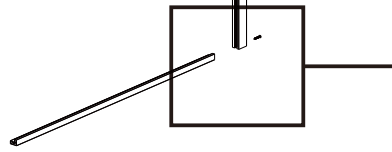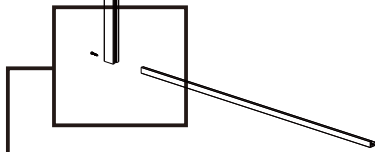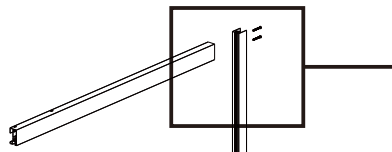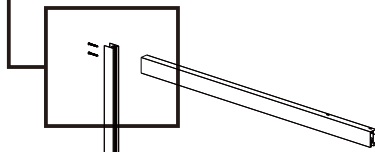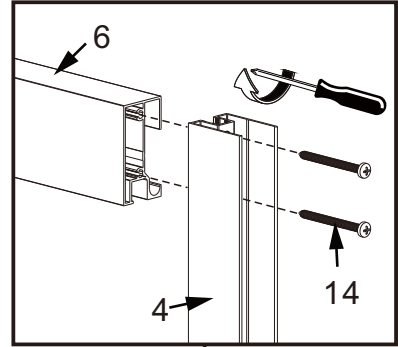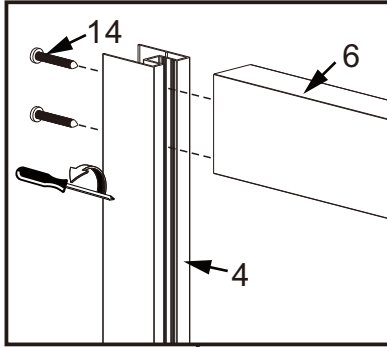


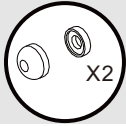
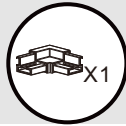


3

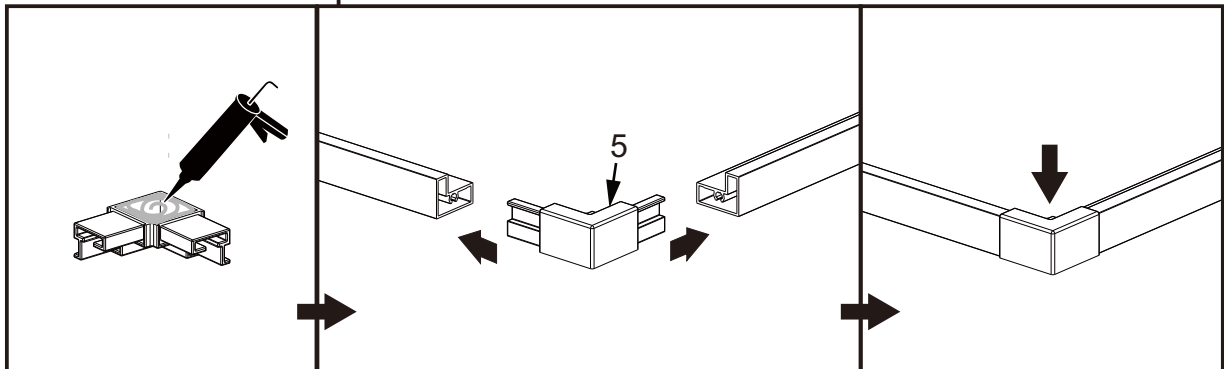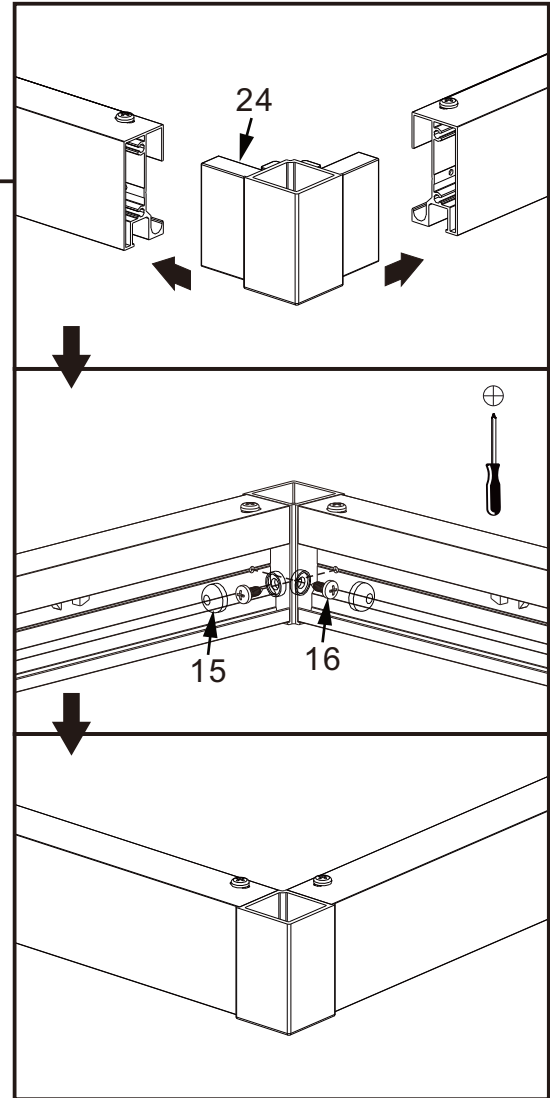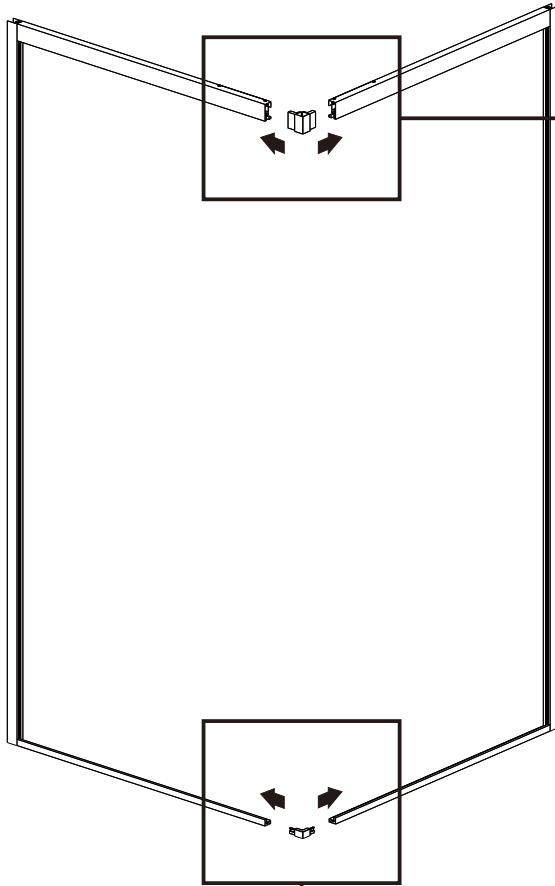






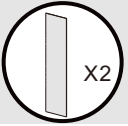


4



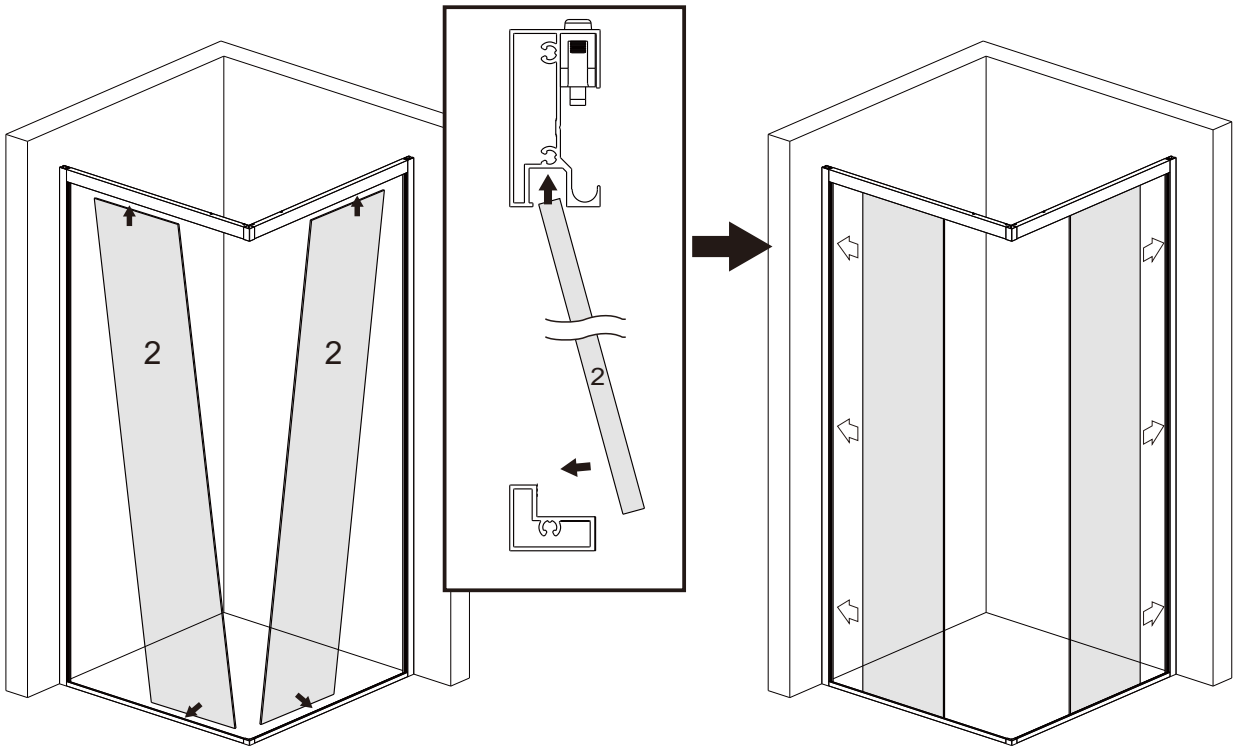
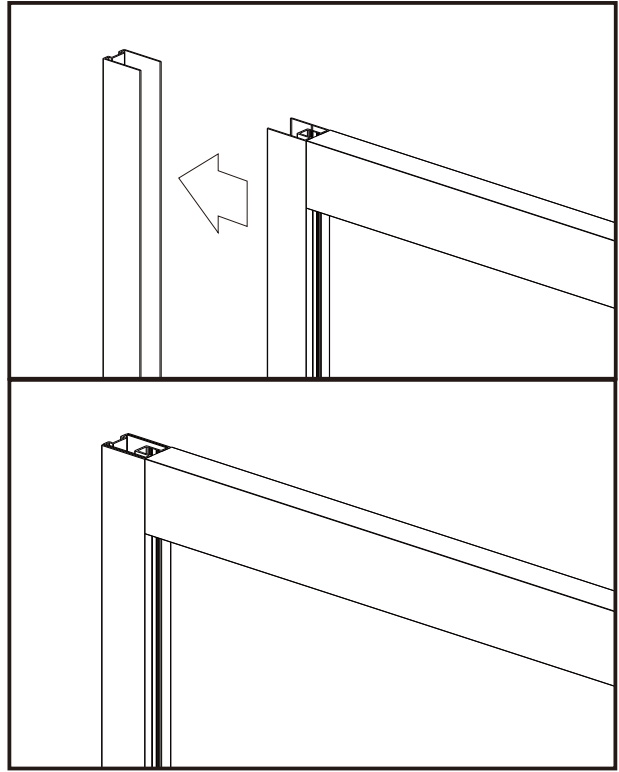
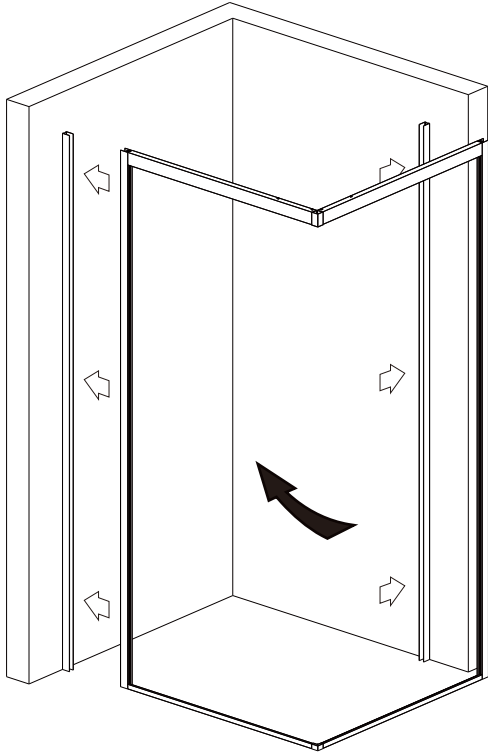









5

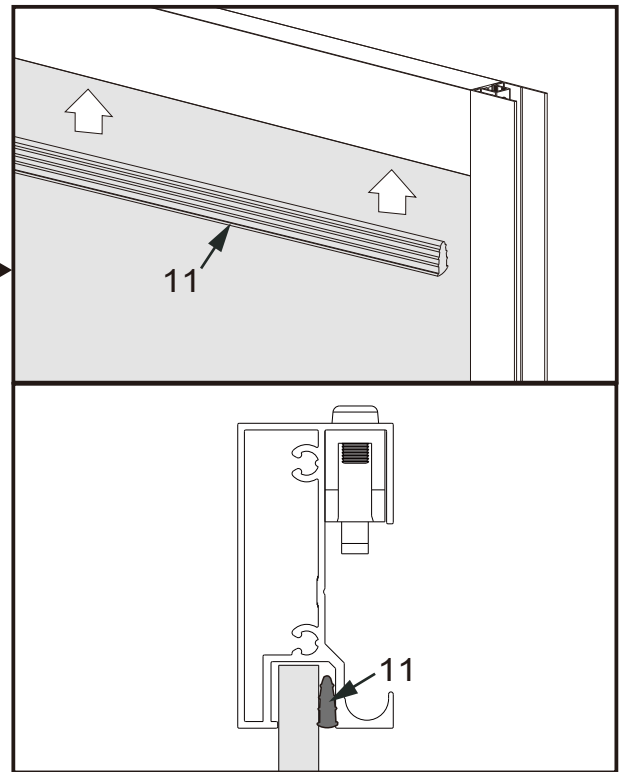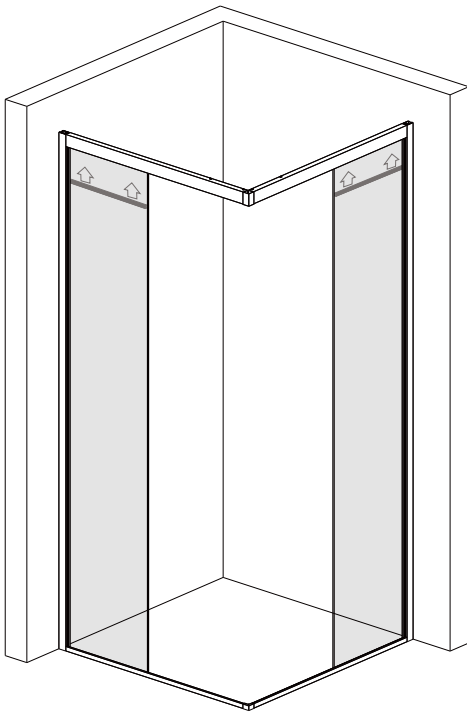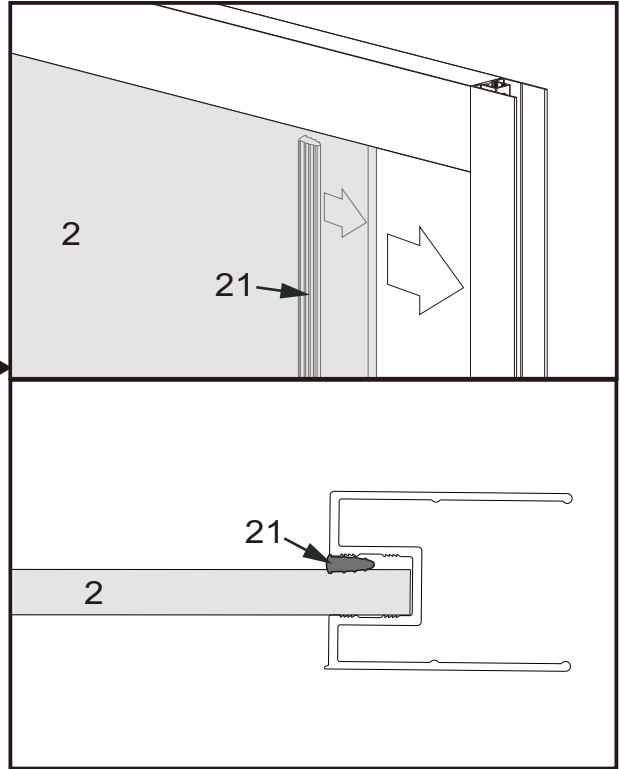
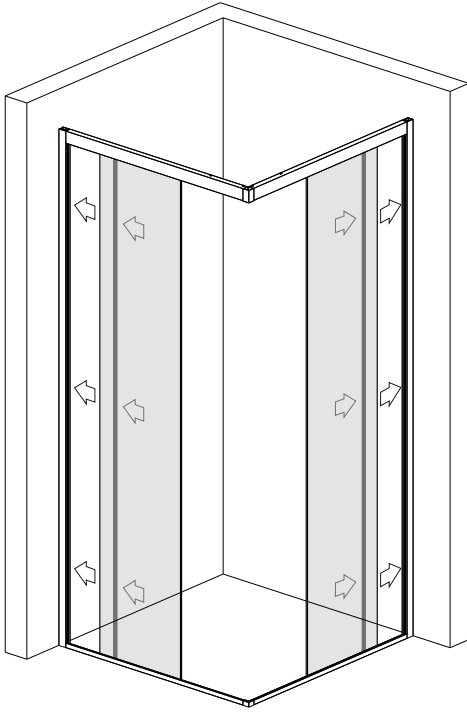




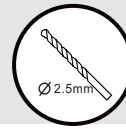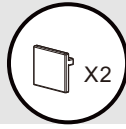
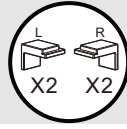
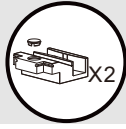
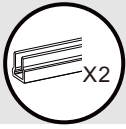





6

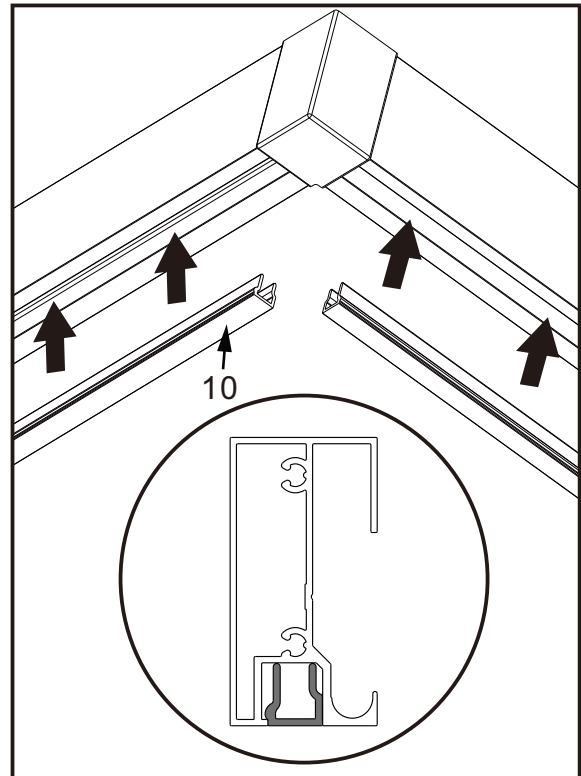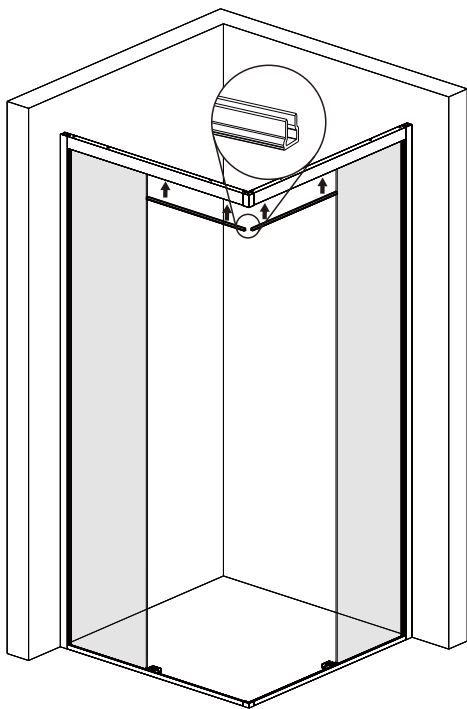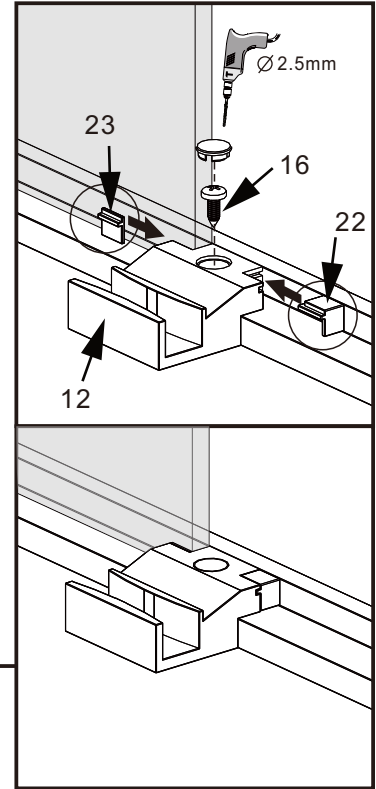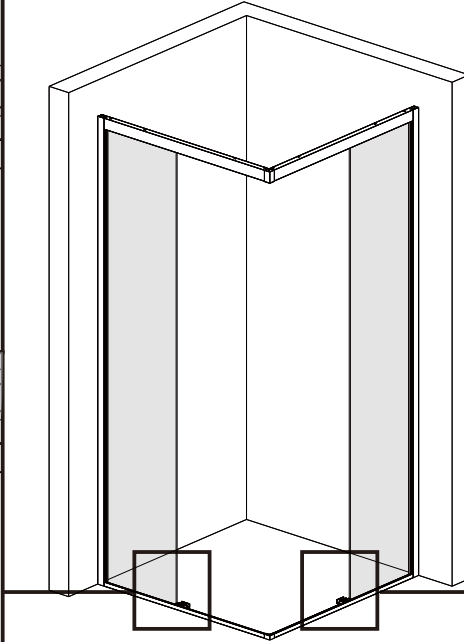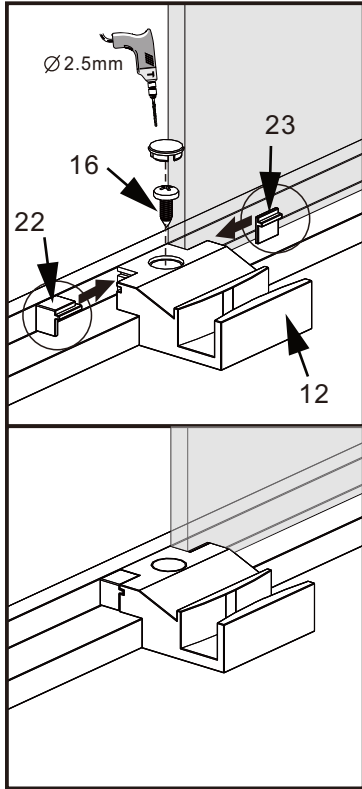




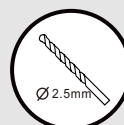
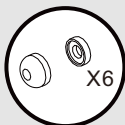



7

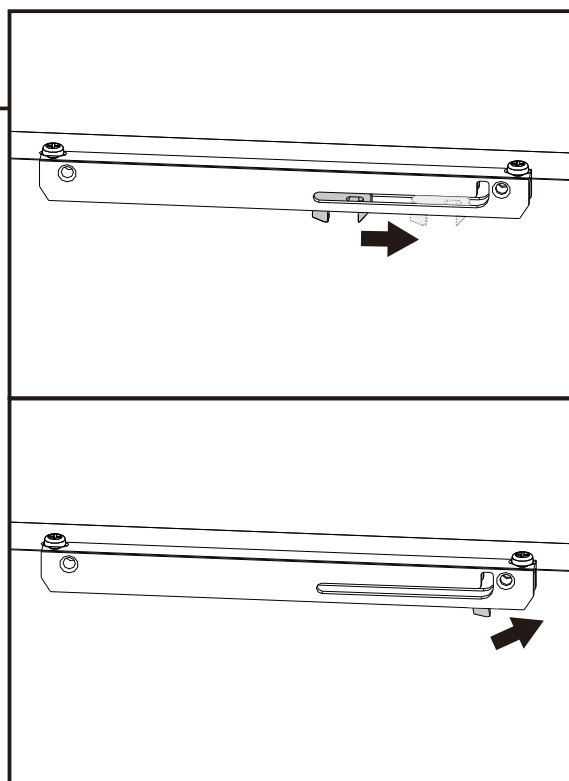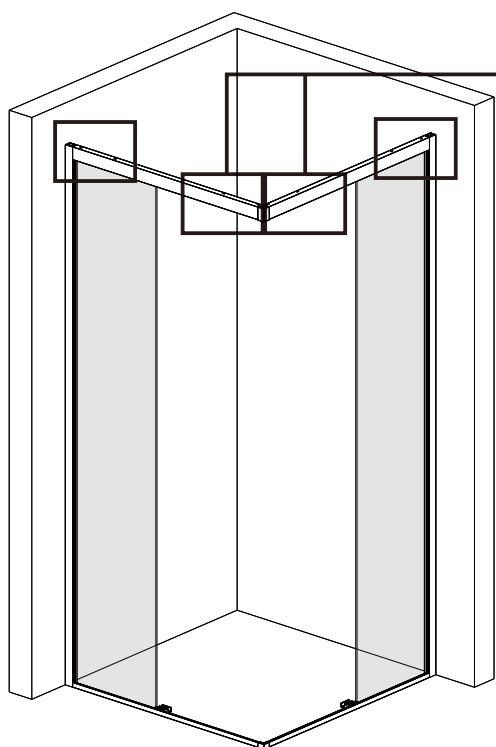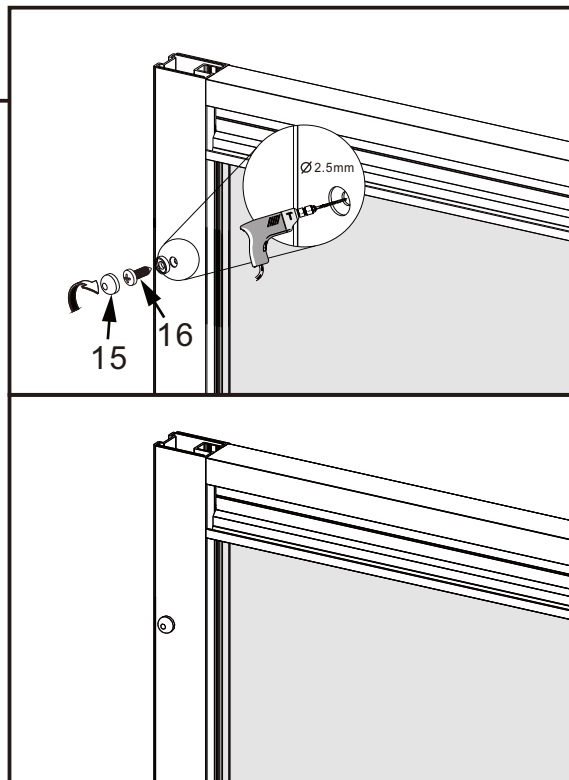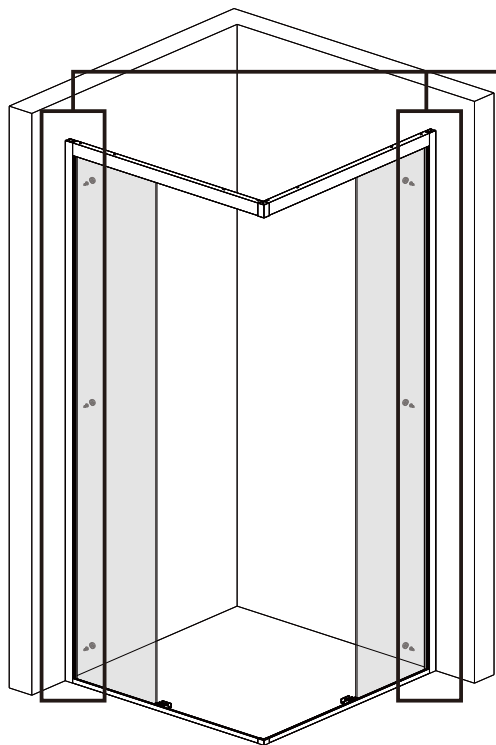

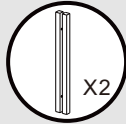
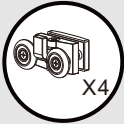
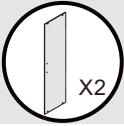


8

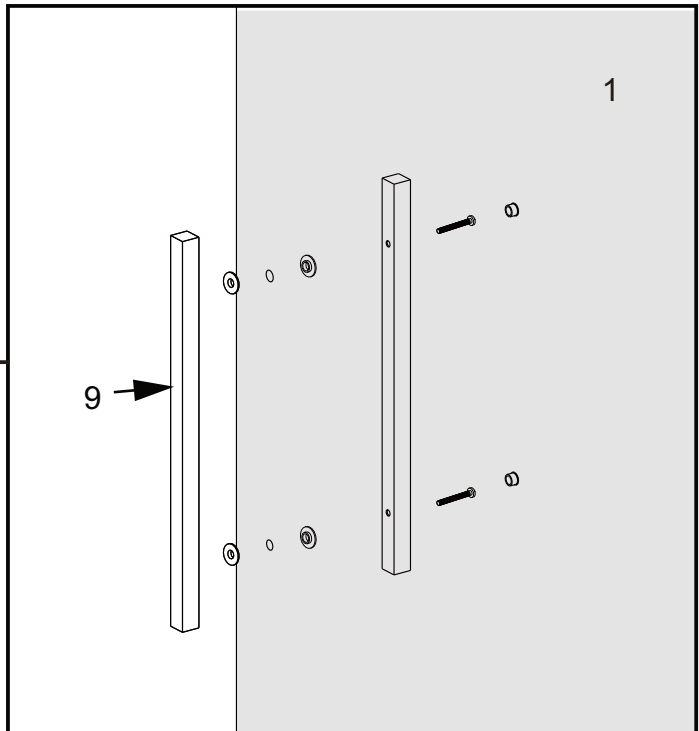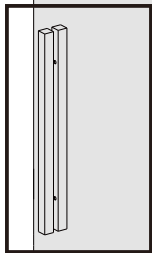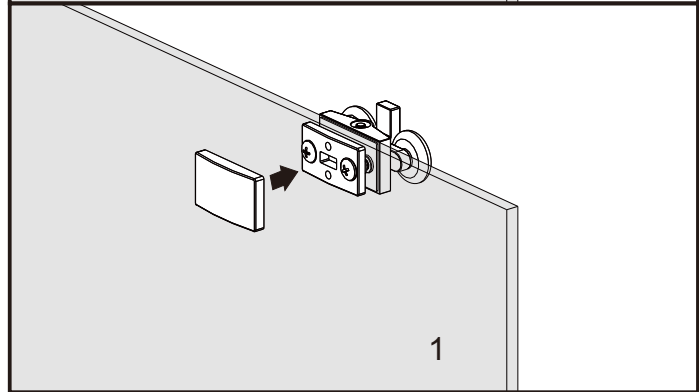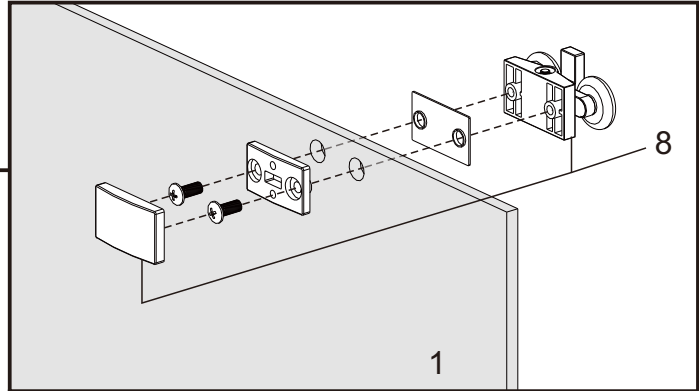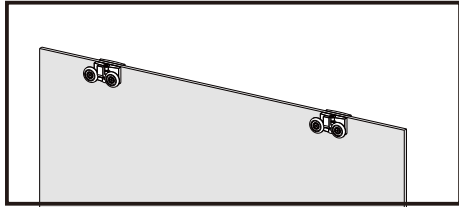





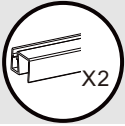



9

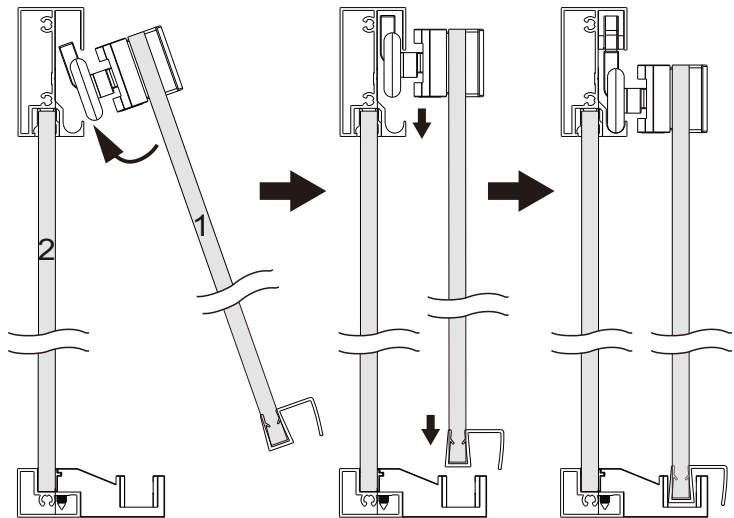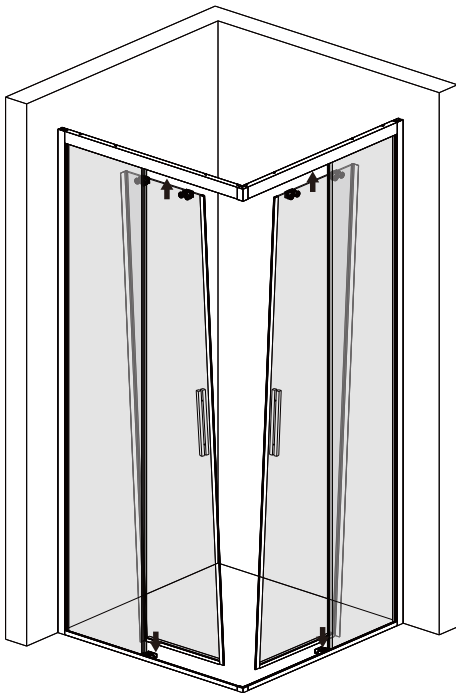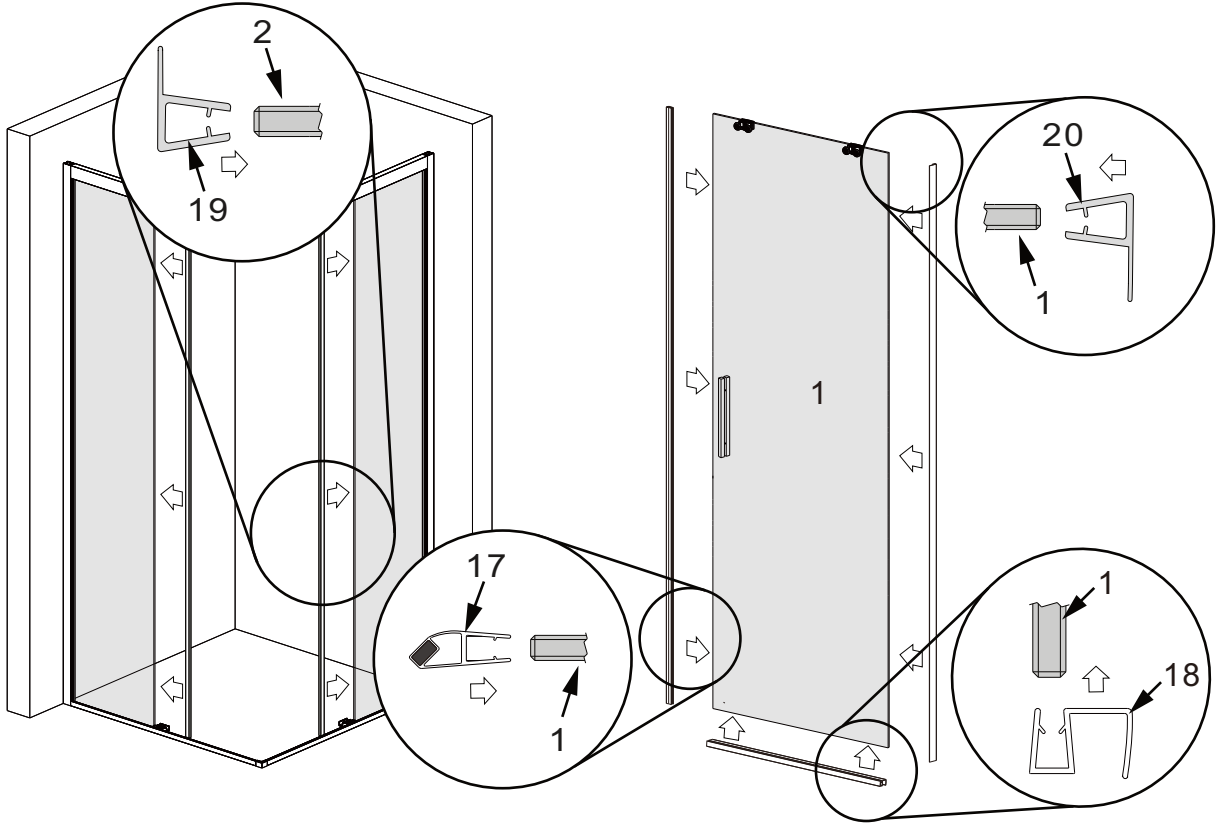






10

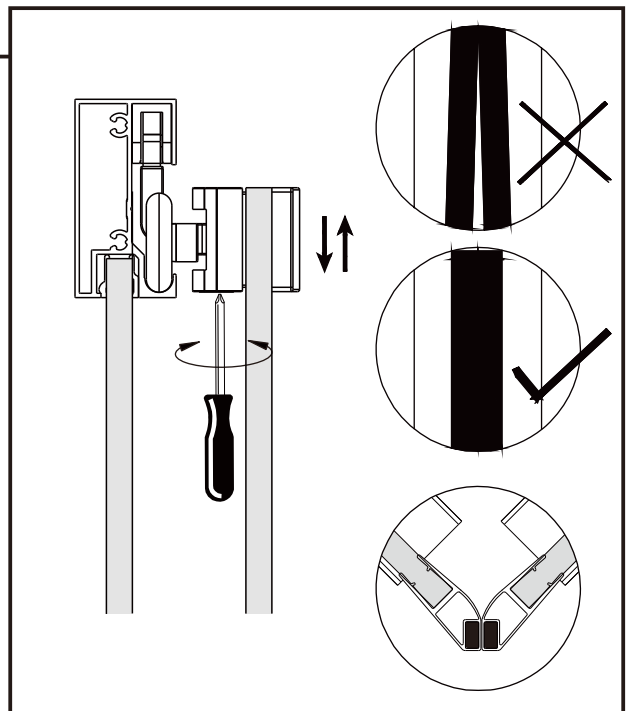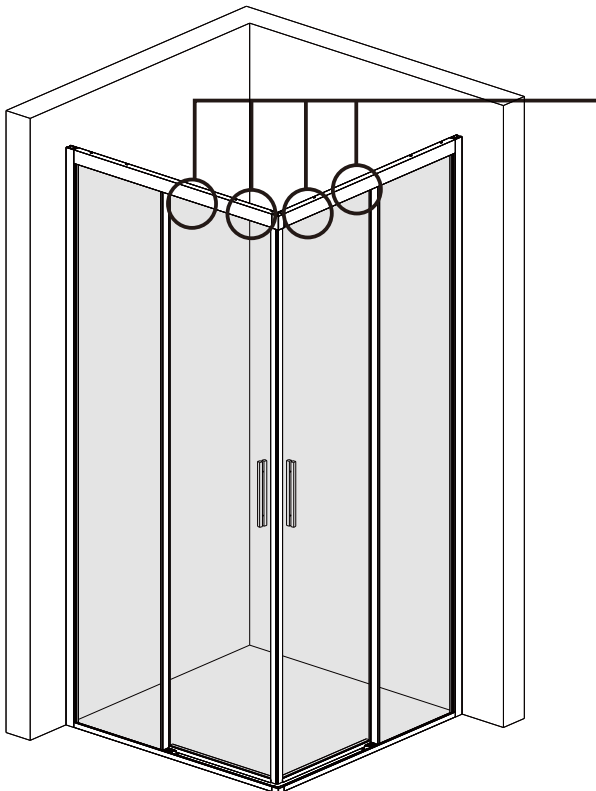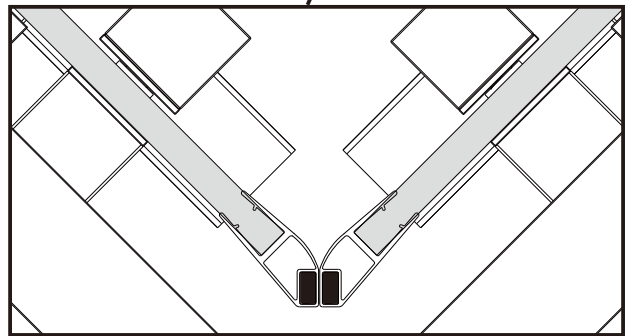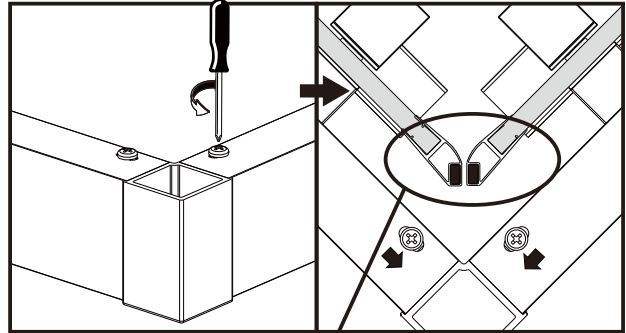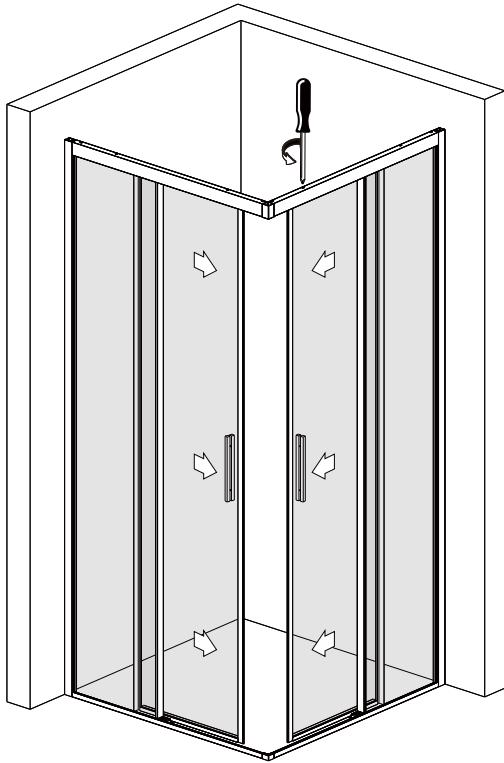

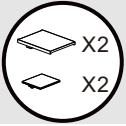

11

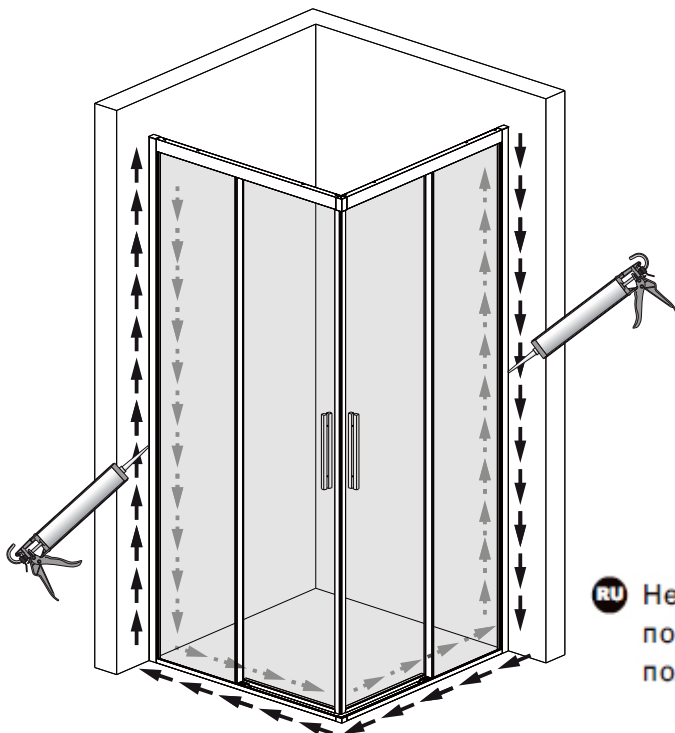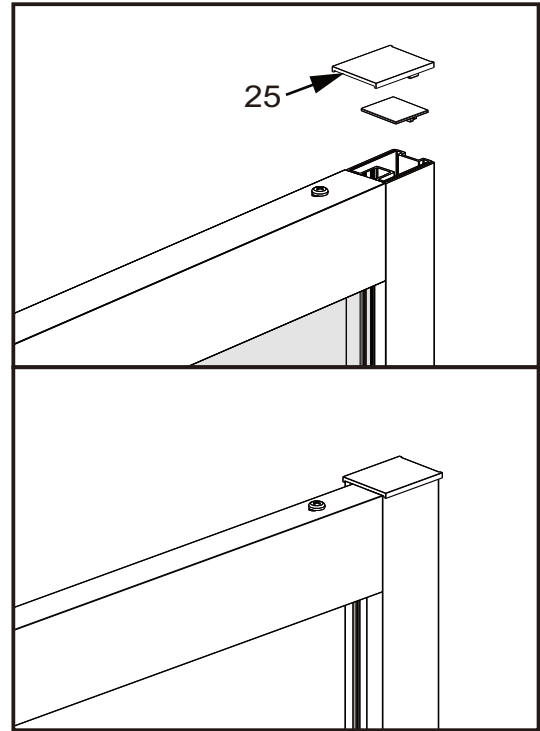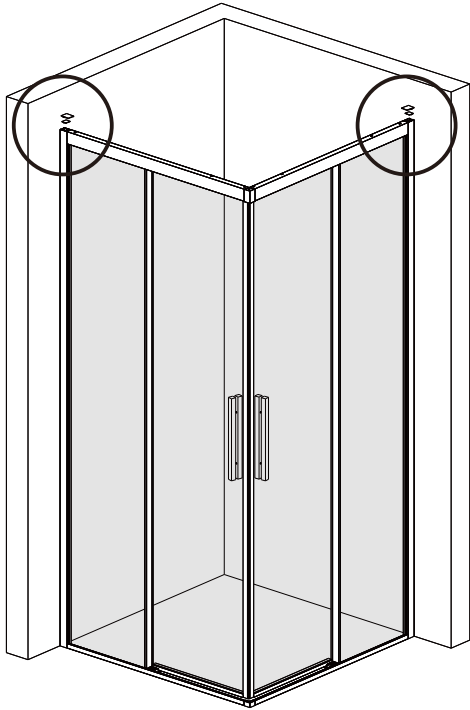

**RU** Не используйте душевое ограждение по крайней мере 24 часа, чтобы дать полностью застыть силиконовому герметику