


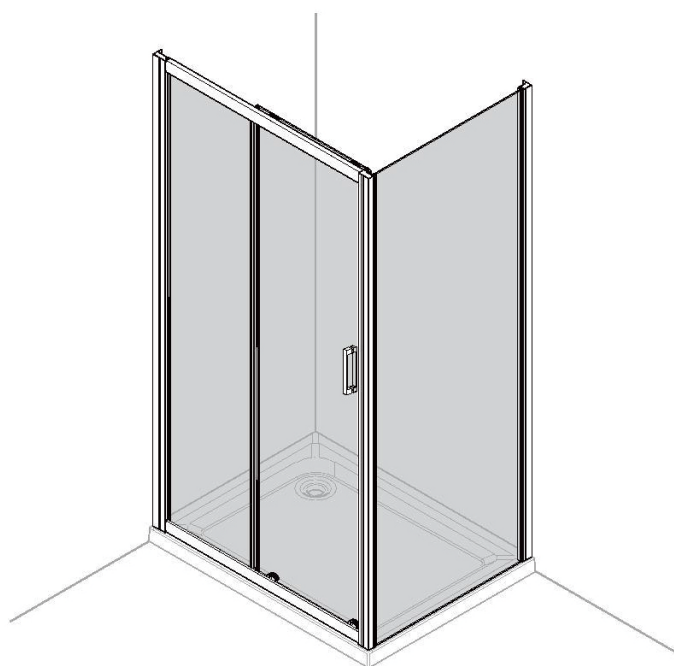
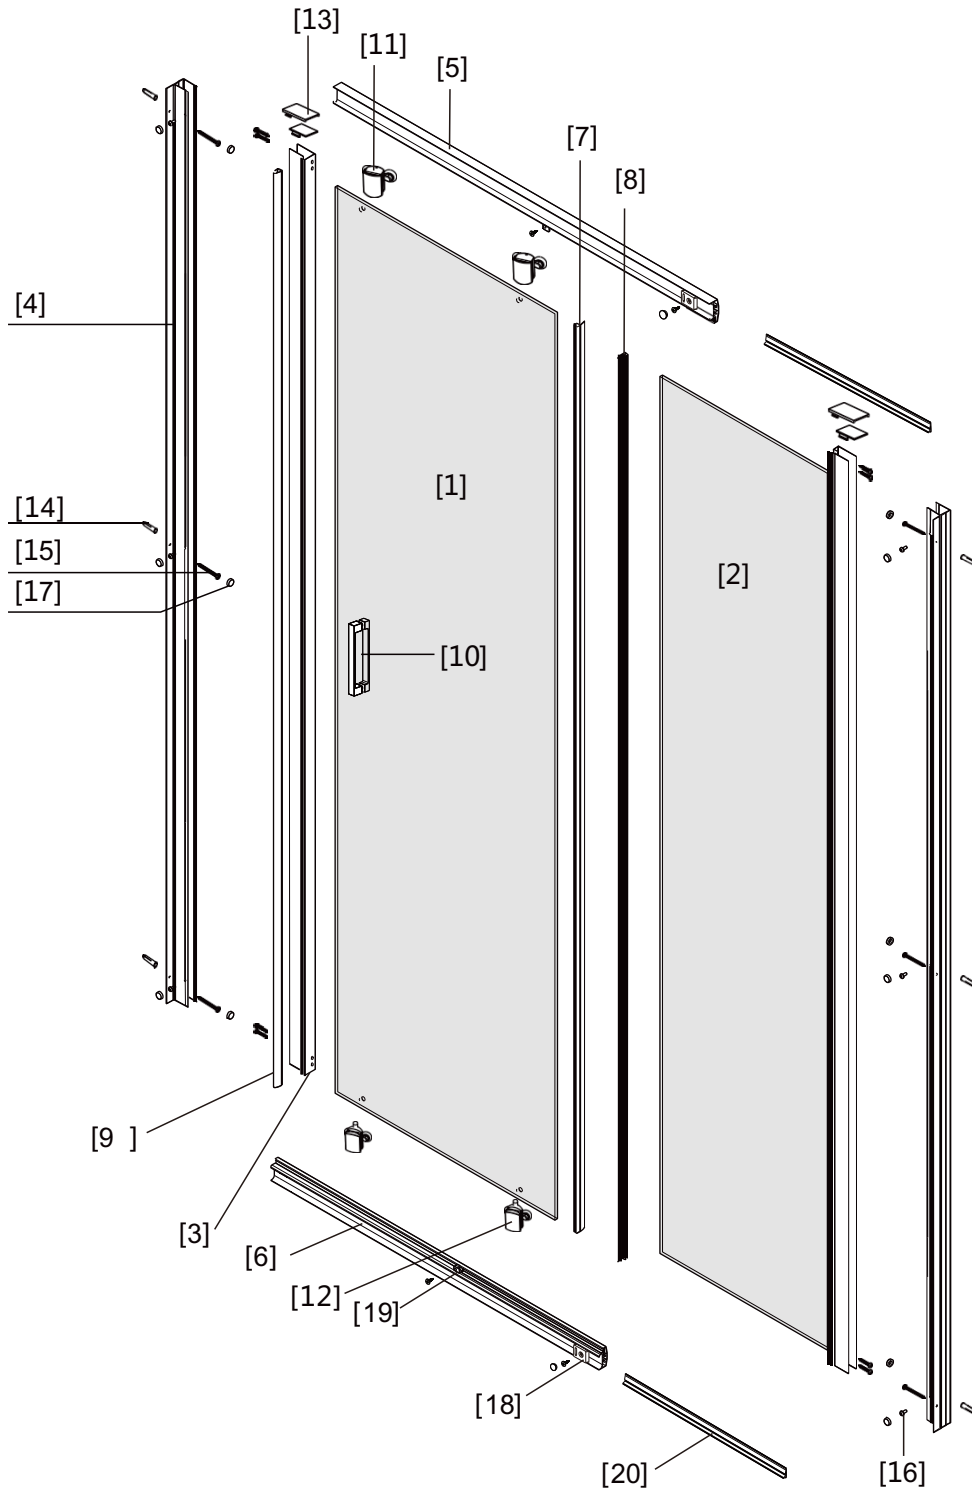
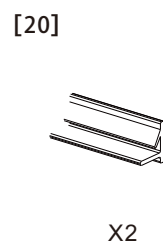
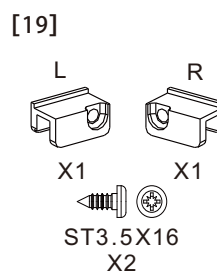
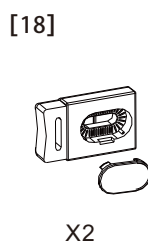
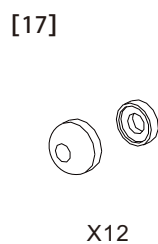
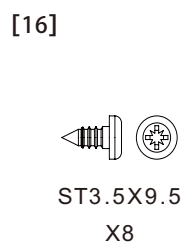
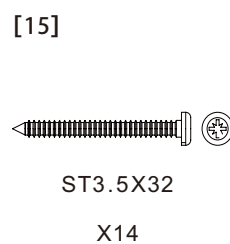
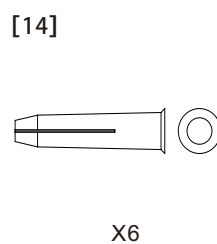
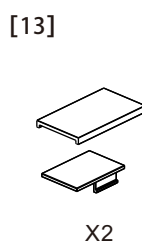
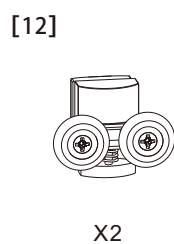
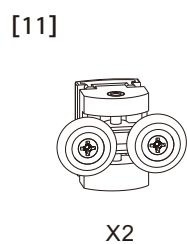
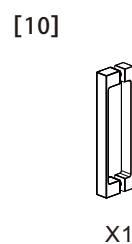
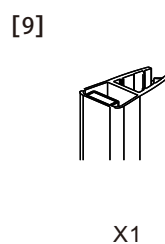
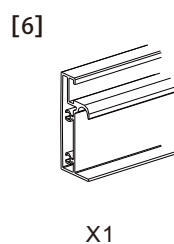
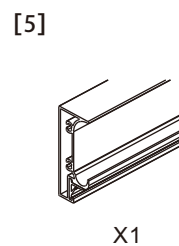
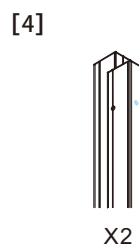

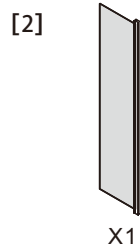
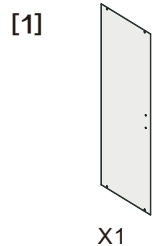
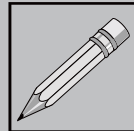











Инструкция по установке
VDS-3AL100CL/VDS-3AL100MT
VDS-3AL110CL/VDS-3AL110MT
VDS-3AL120CL/VDS-3AL120MT
VDS-3AL130CL/VDS-3AL130MT
VDS-3AL140CL/VDS-3AL140MT
VDS-3AL150CL/VDS-3AL150MT
+
VSG-3AL800CL/VSG-3AL800MT
VSG-3AL900CL/VSG-3AL900MT

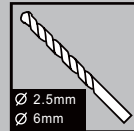



VERSION 1



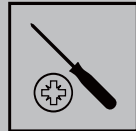


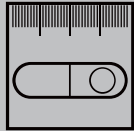

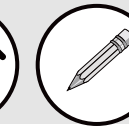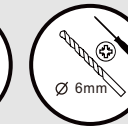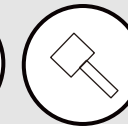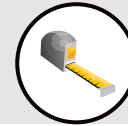
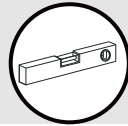
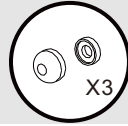
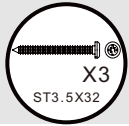
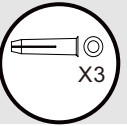
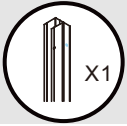



1

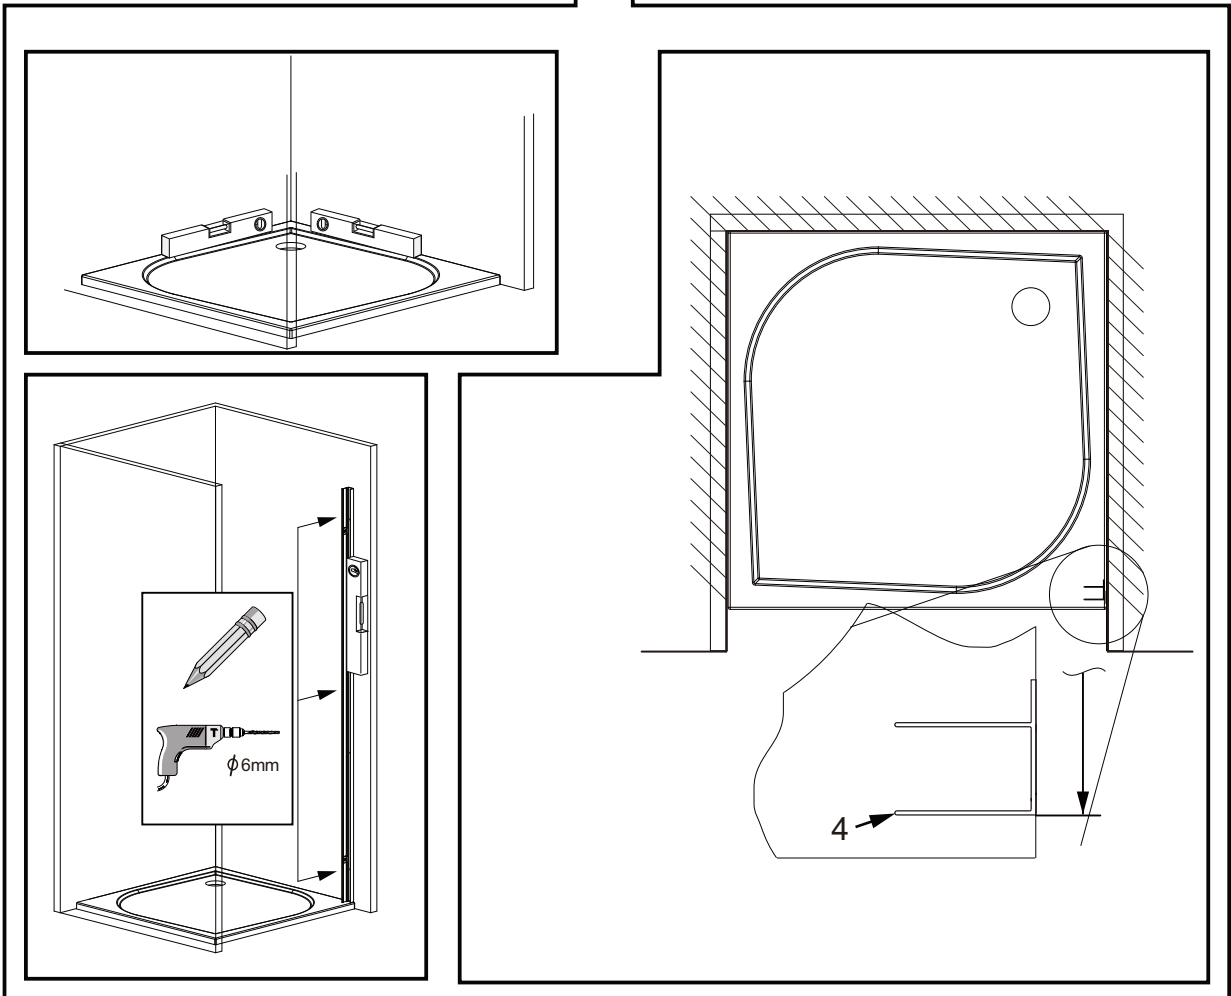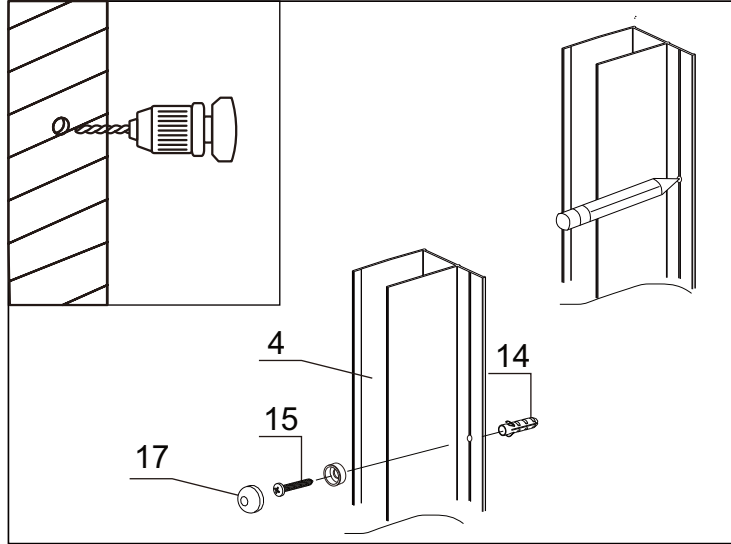


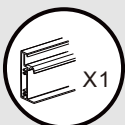
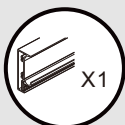
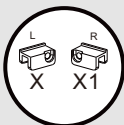







2

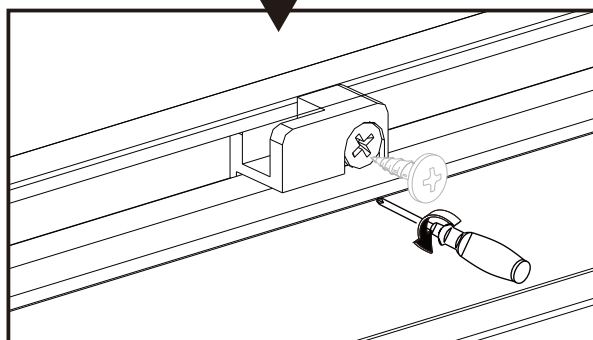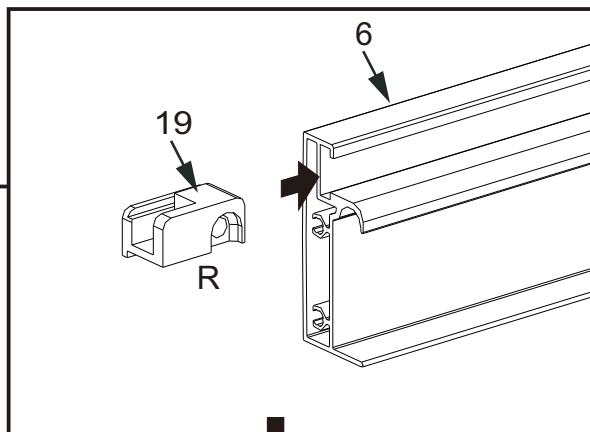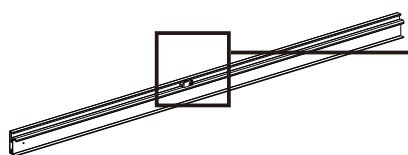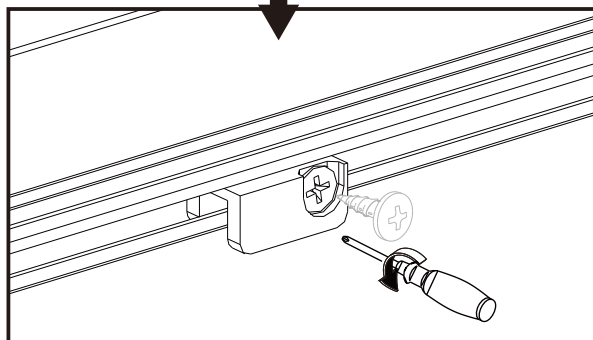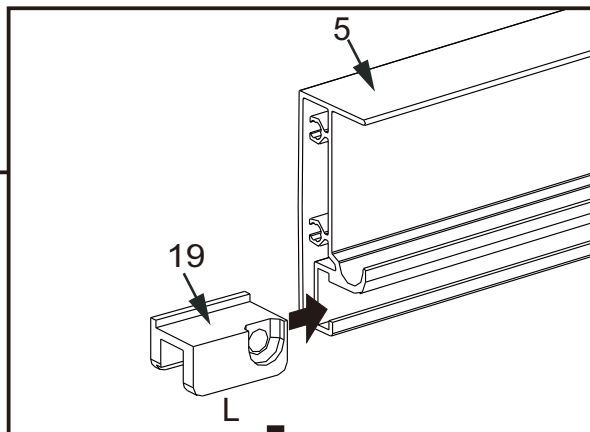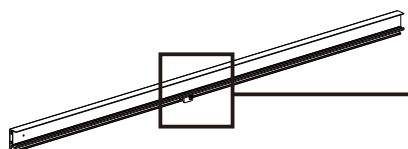


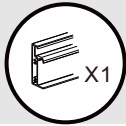



3

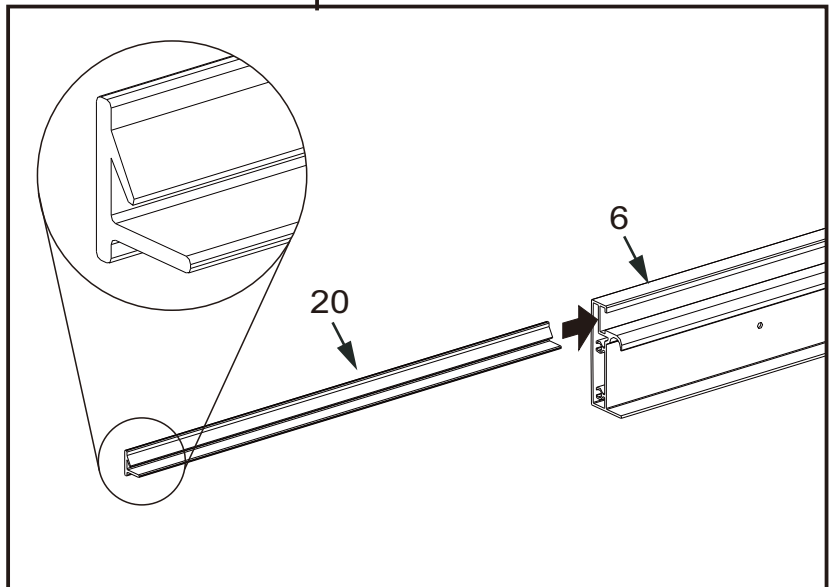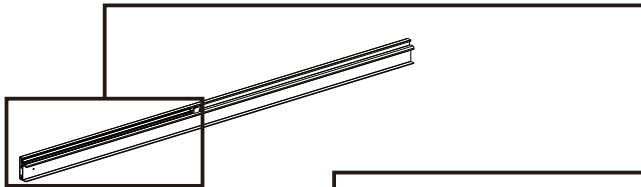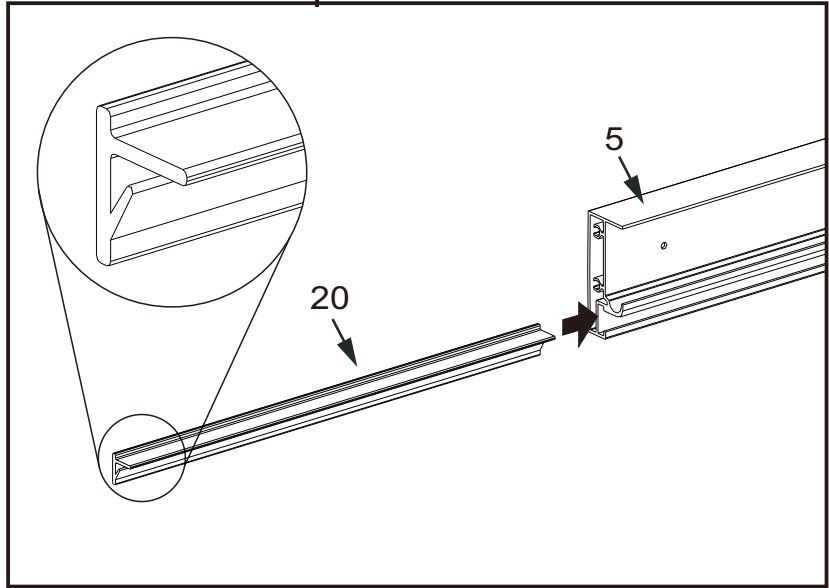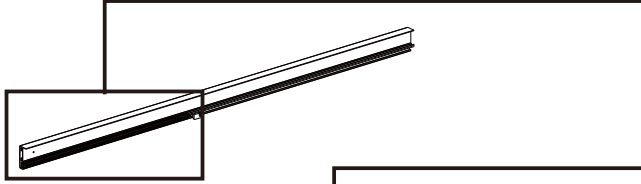

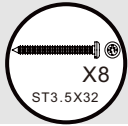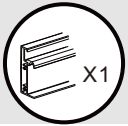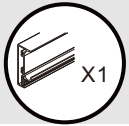
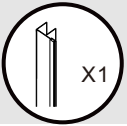
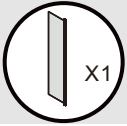






4

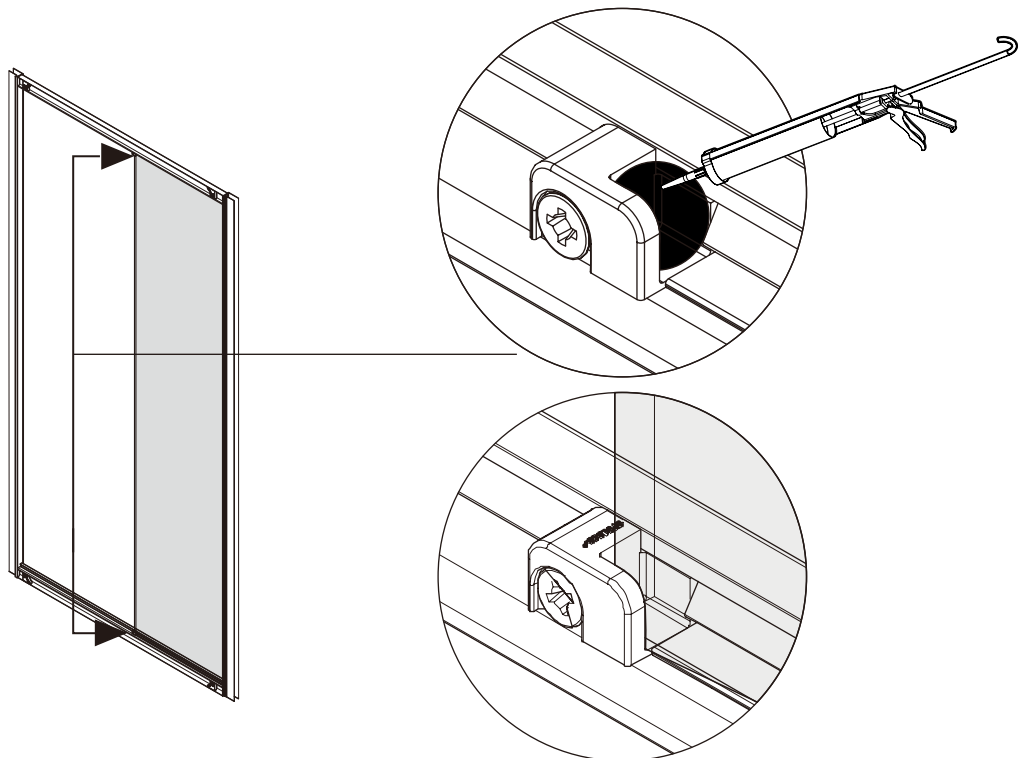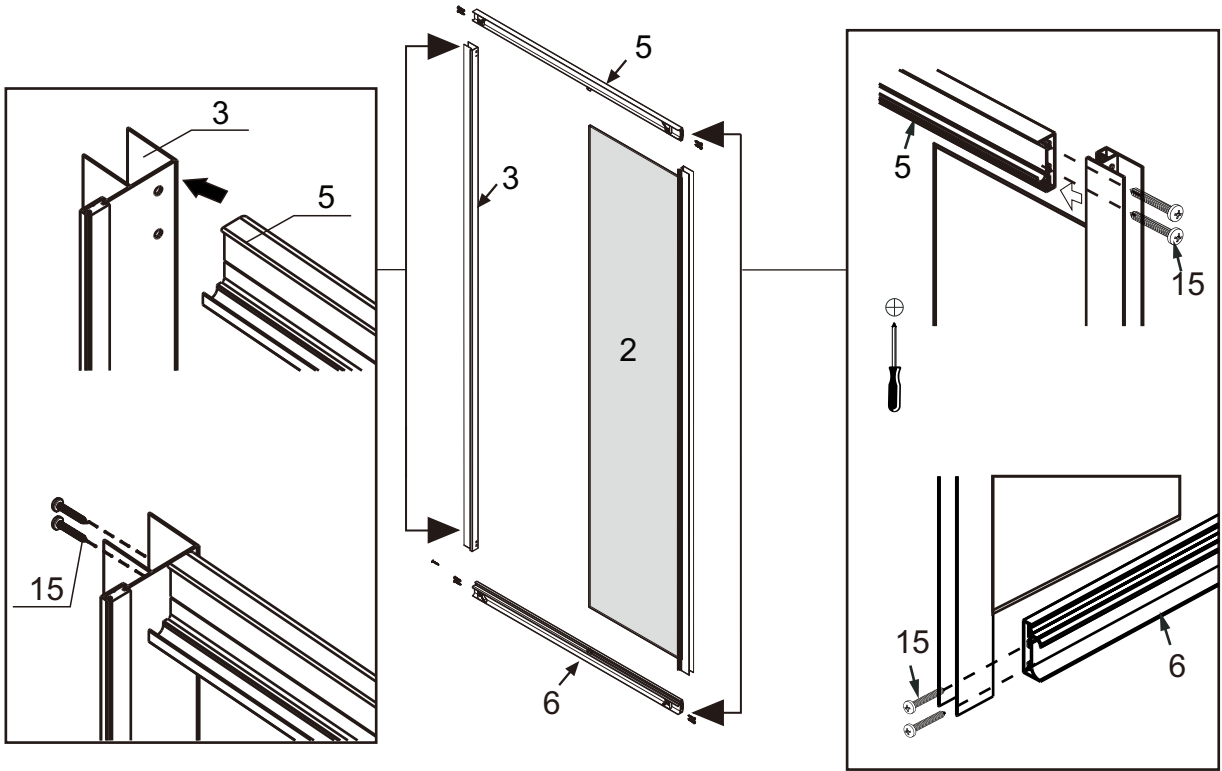




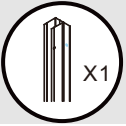





5

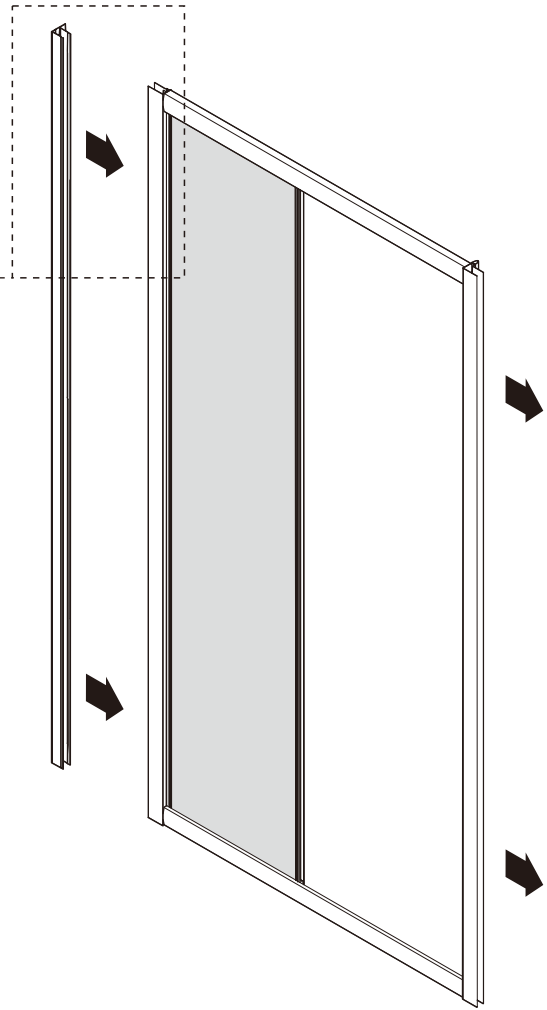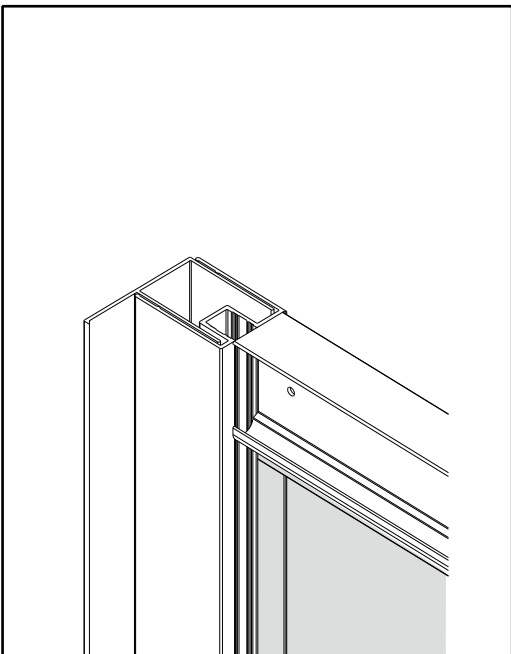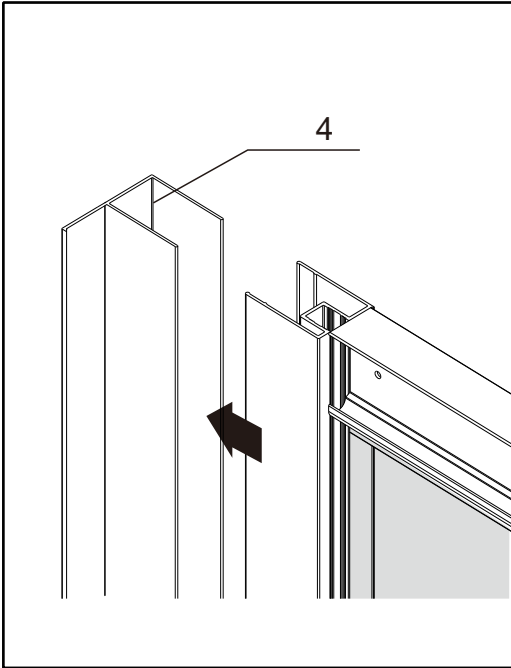

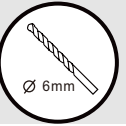
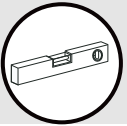
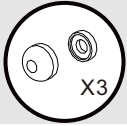
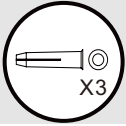




6

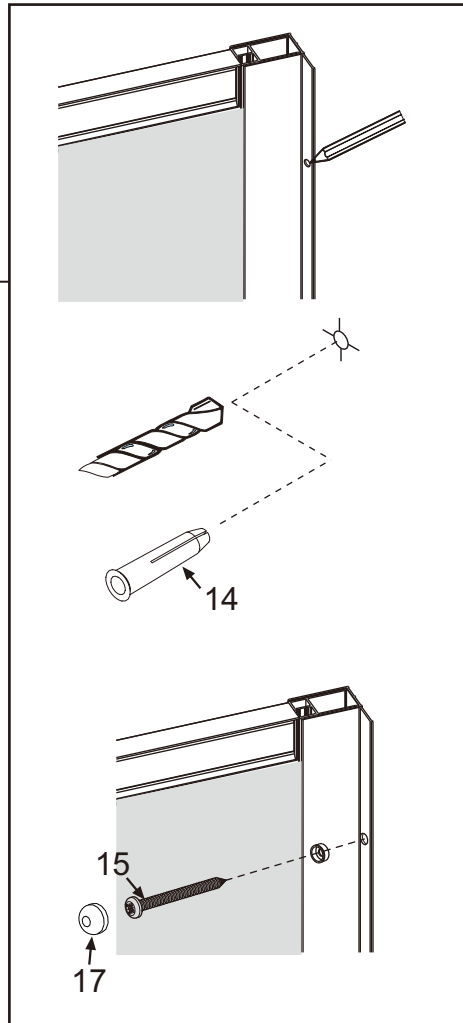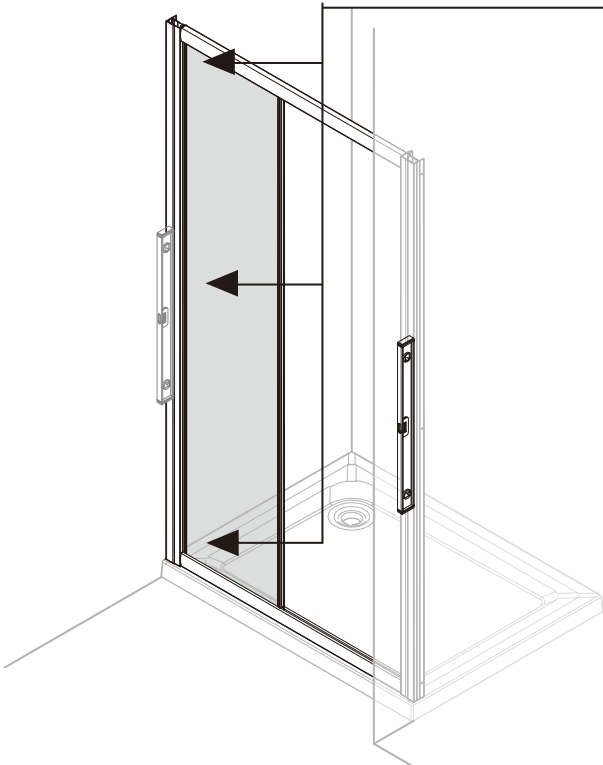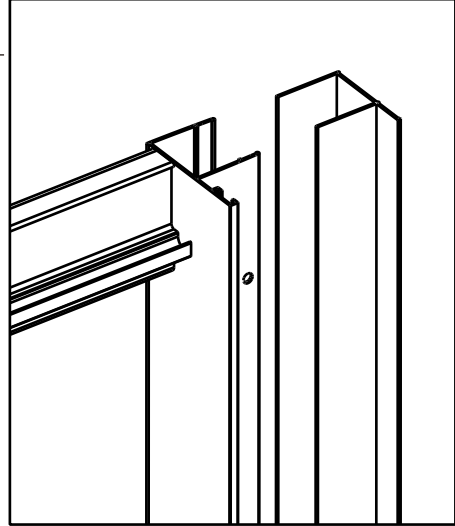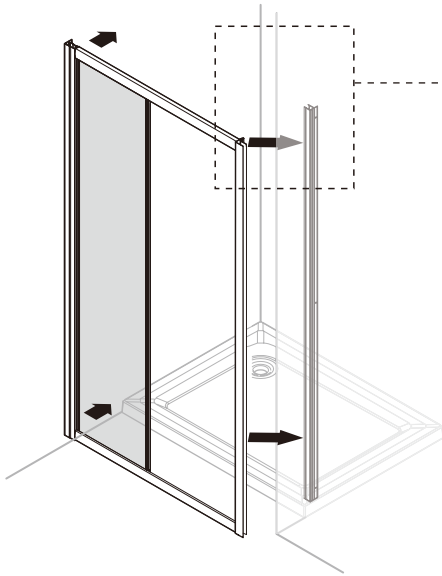


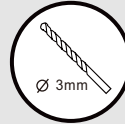
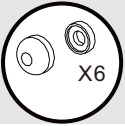
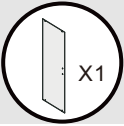


7

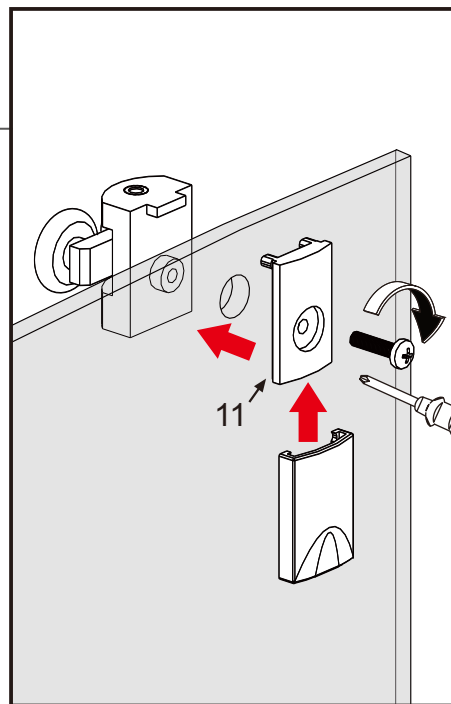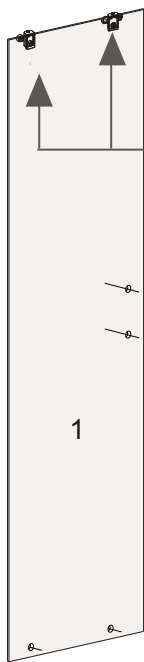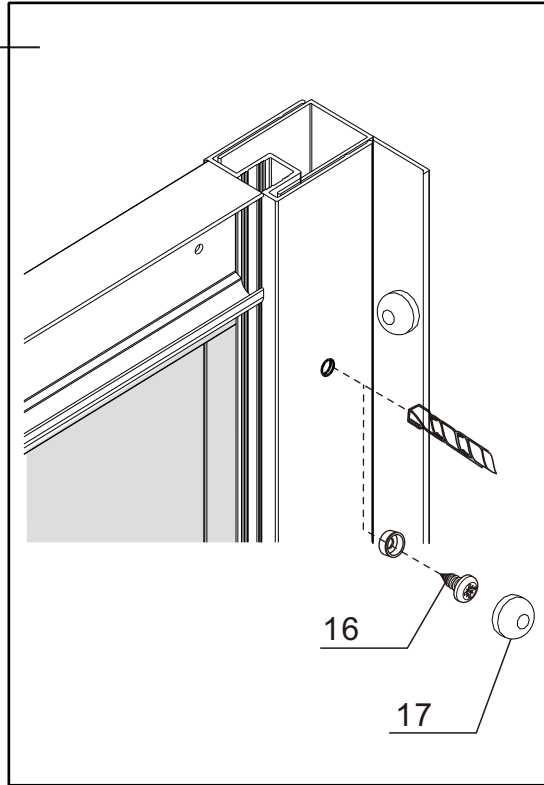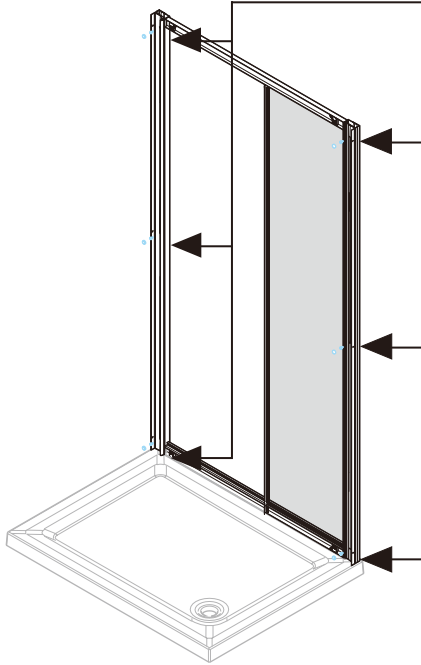


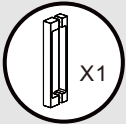
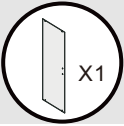



8

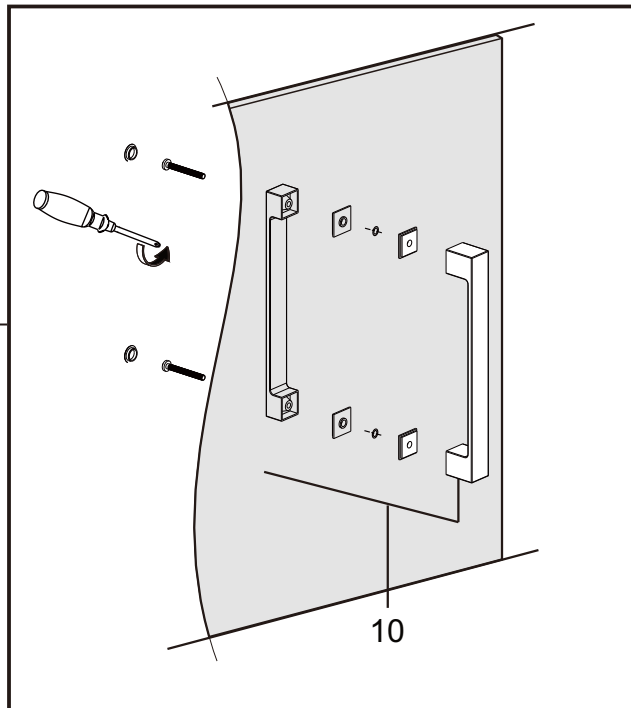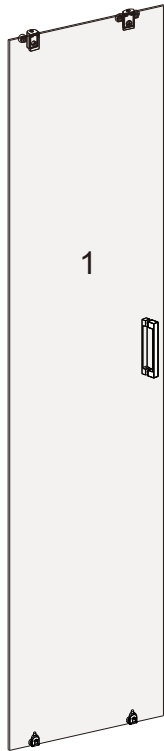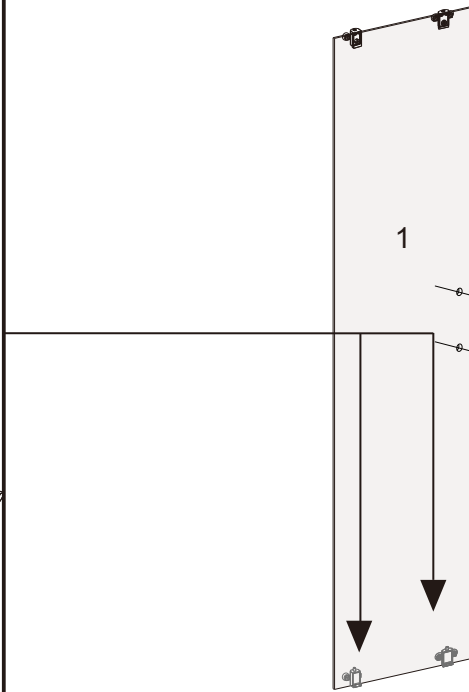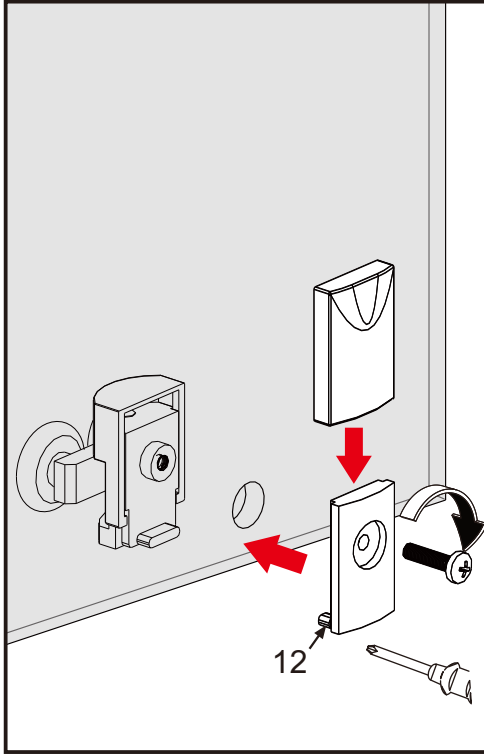







9

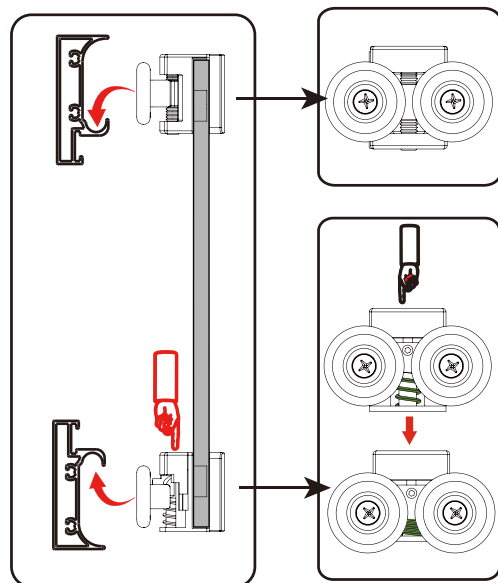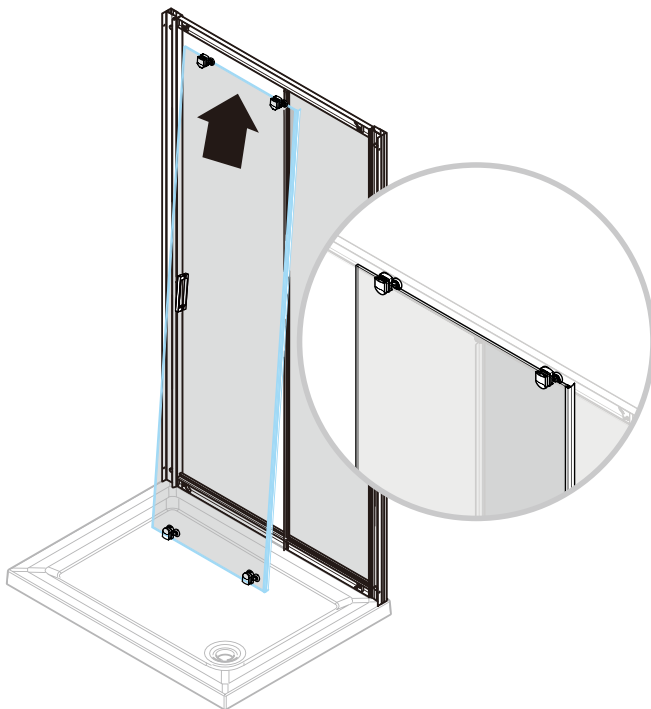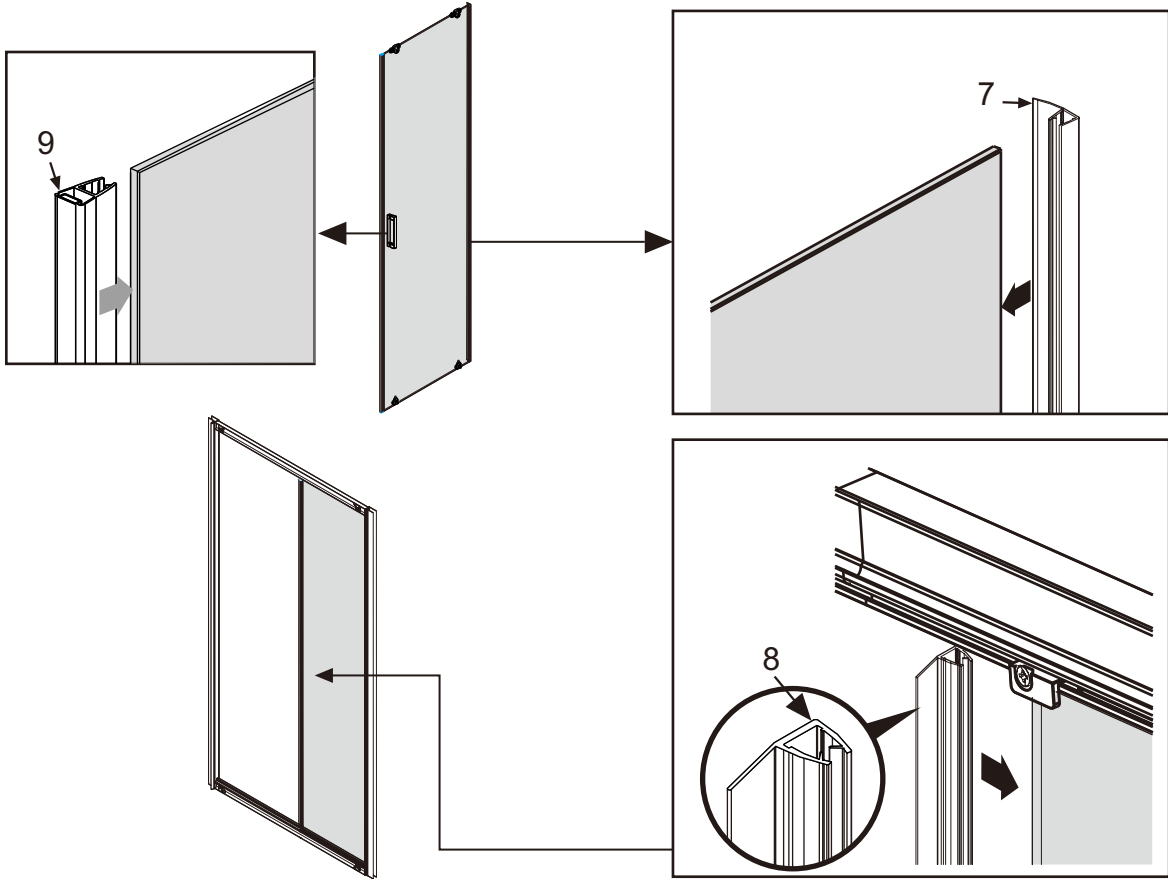


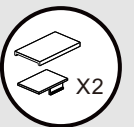


10

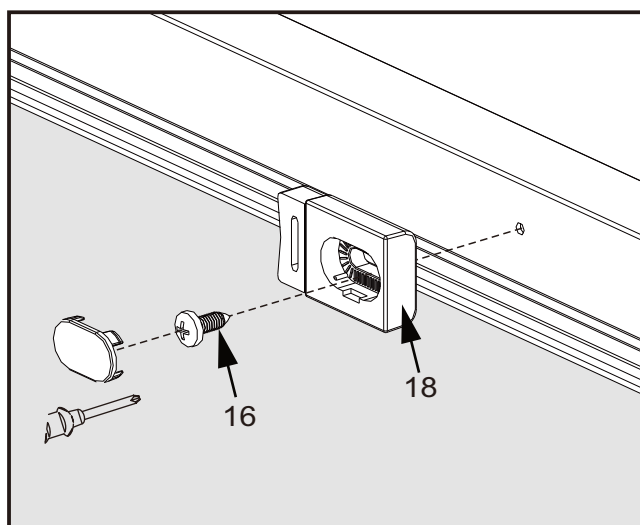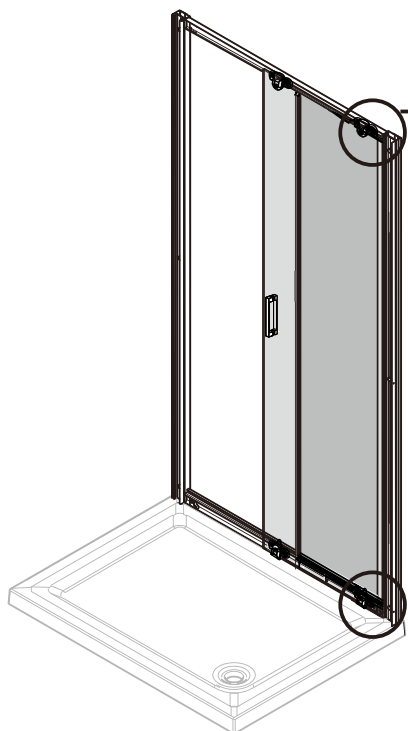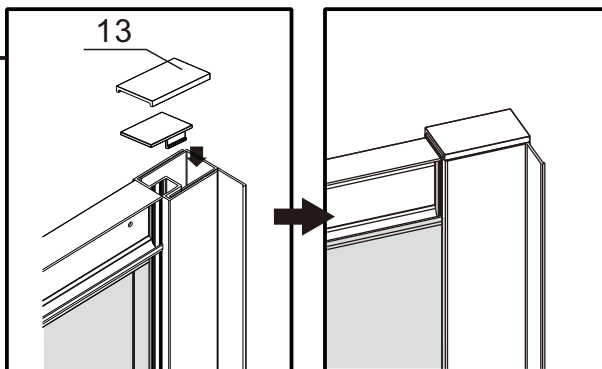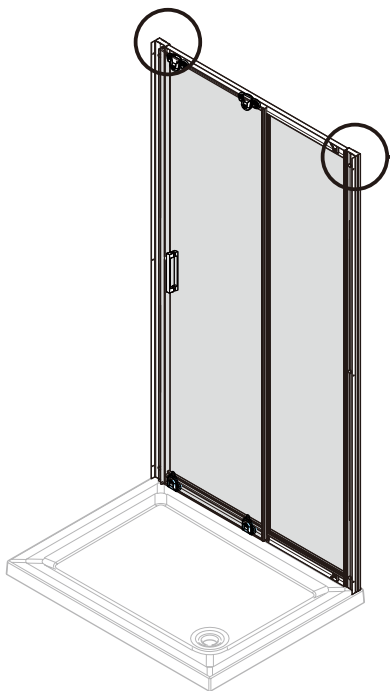









11

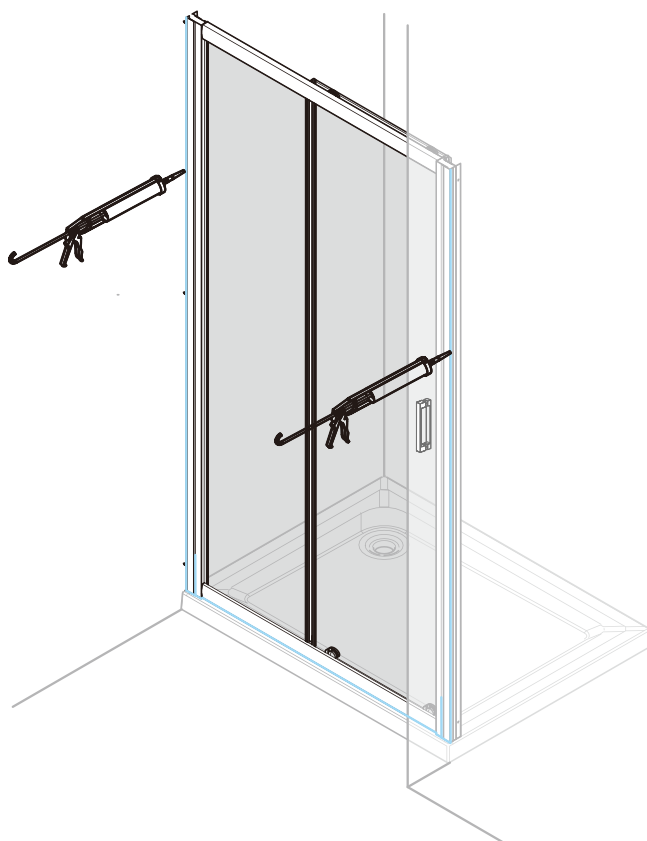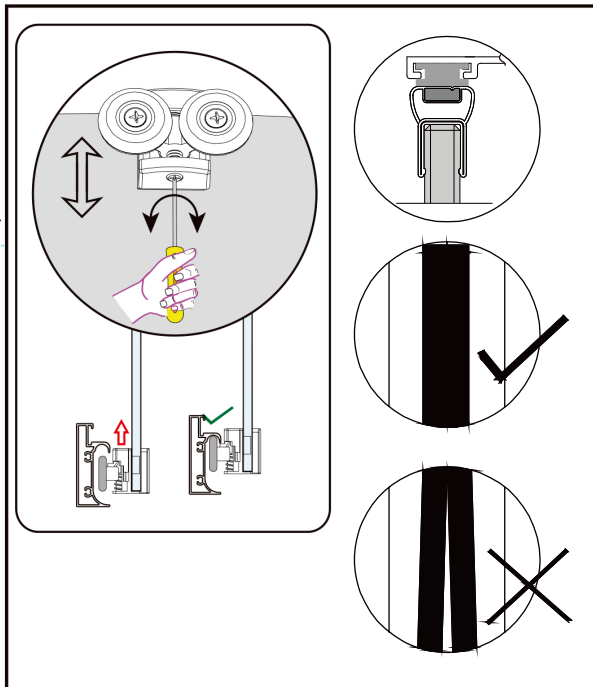

VERSION 2

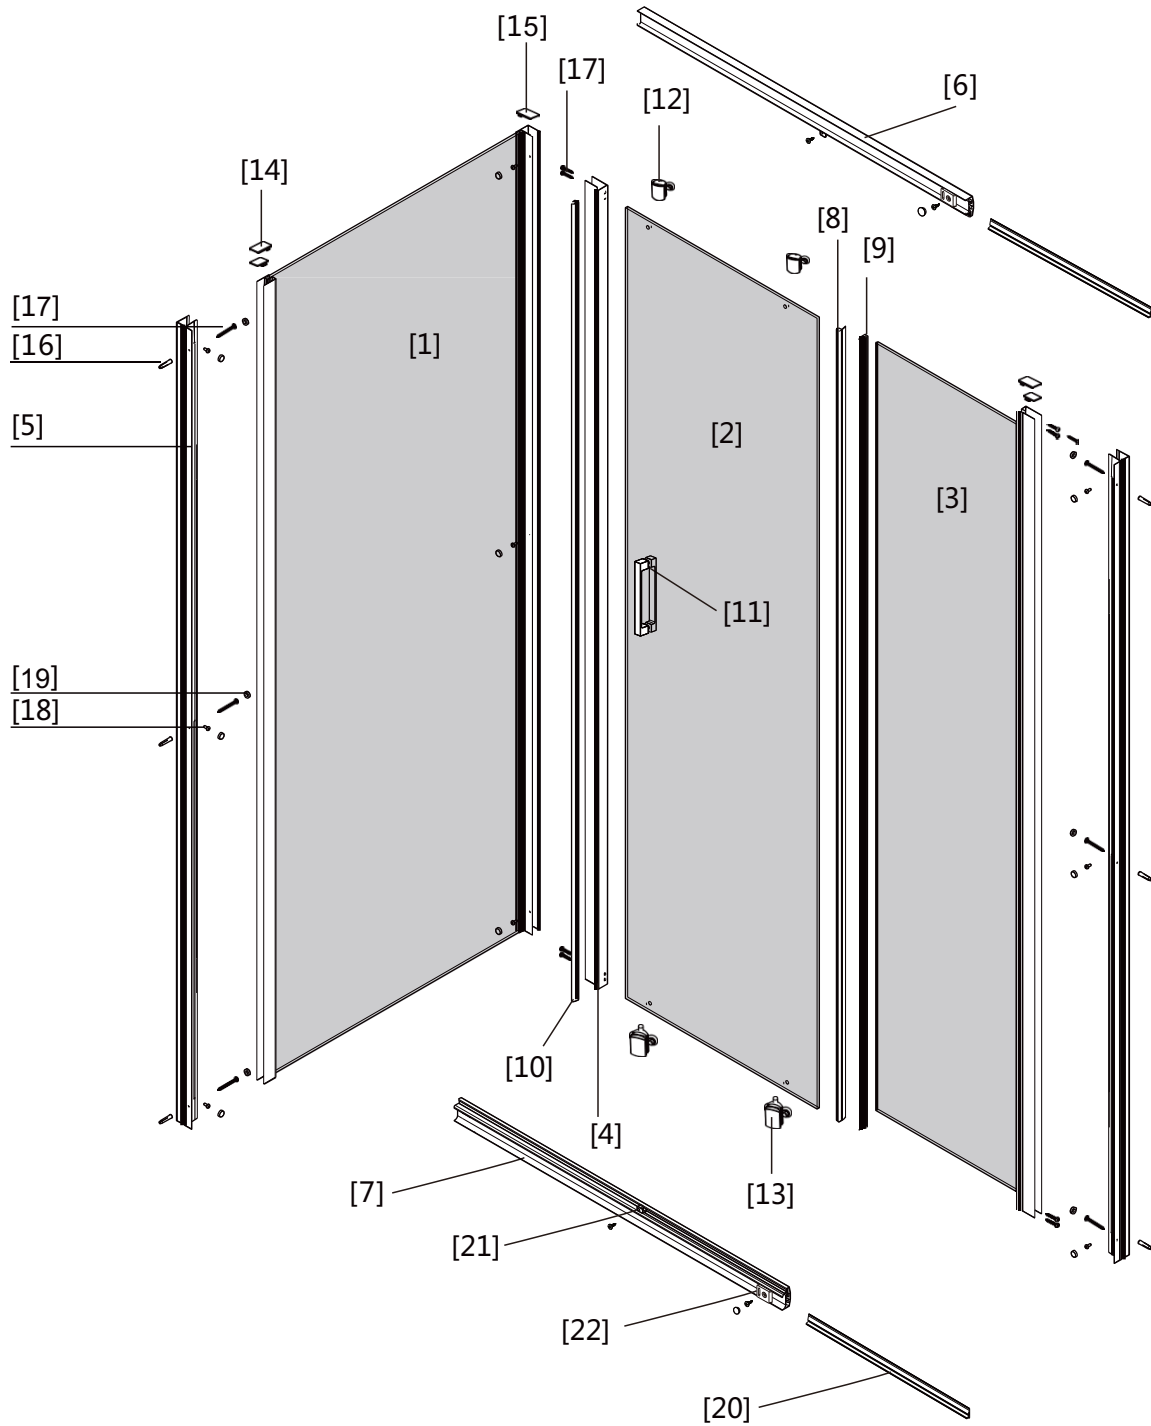

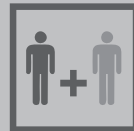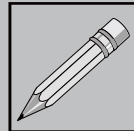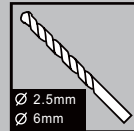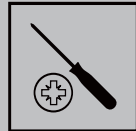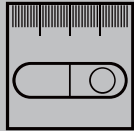

[1]



X1

[2]




X1

[3]



X1

[4]



X1

[5]




X2

[6]



X1

[7]



X1

[8]



L=1883

X1

[9]



L=1814

X1

[10]




X1

[11]



X1

[12]



X2

[13]



X2

[14]



X2


[15]



X1

X1

[16]



X6

[17]



3.5X32
X14

[18]



3.5X9.5
X11

[19]




X15

[20]



X2

[21]



X1




X1

ST3.5X16
X2







[22]





X2


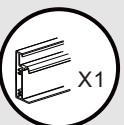
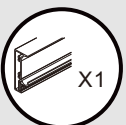
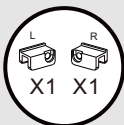







1

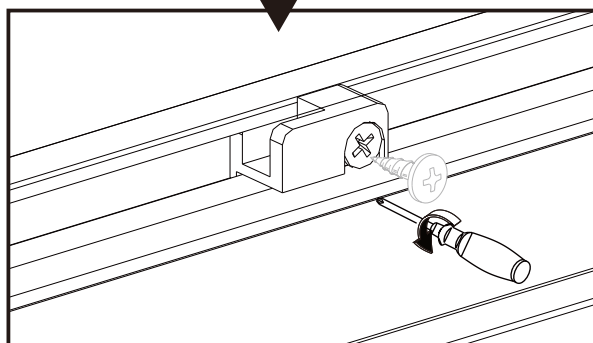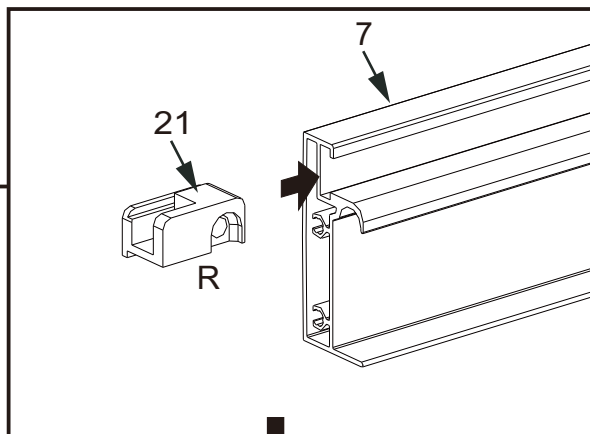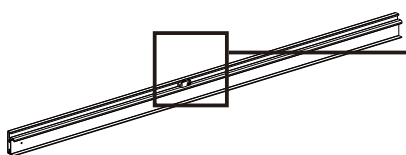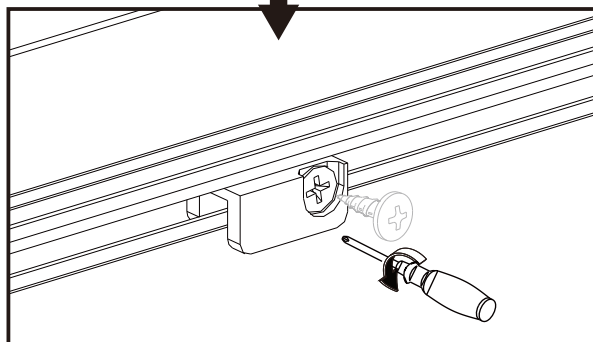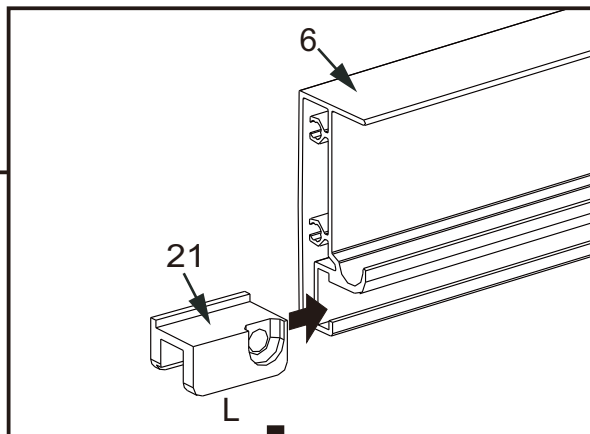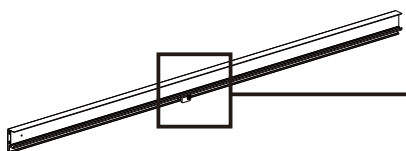

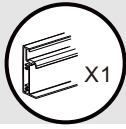
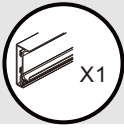





2

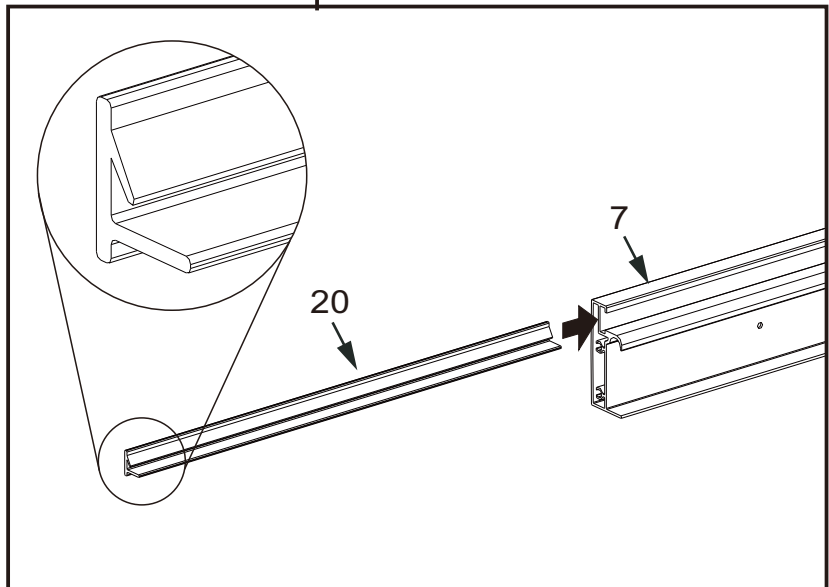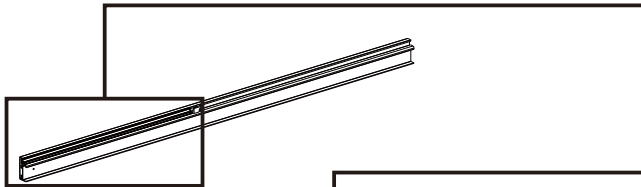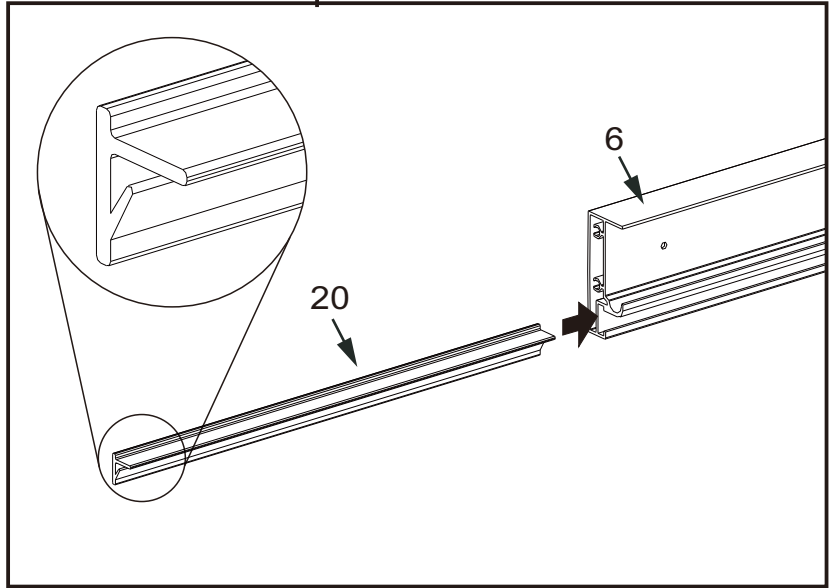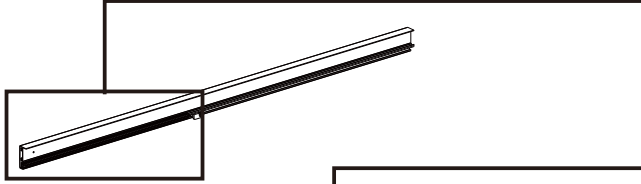

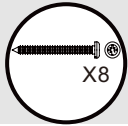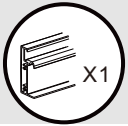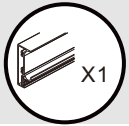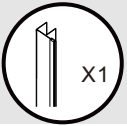
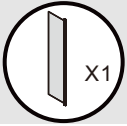


3

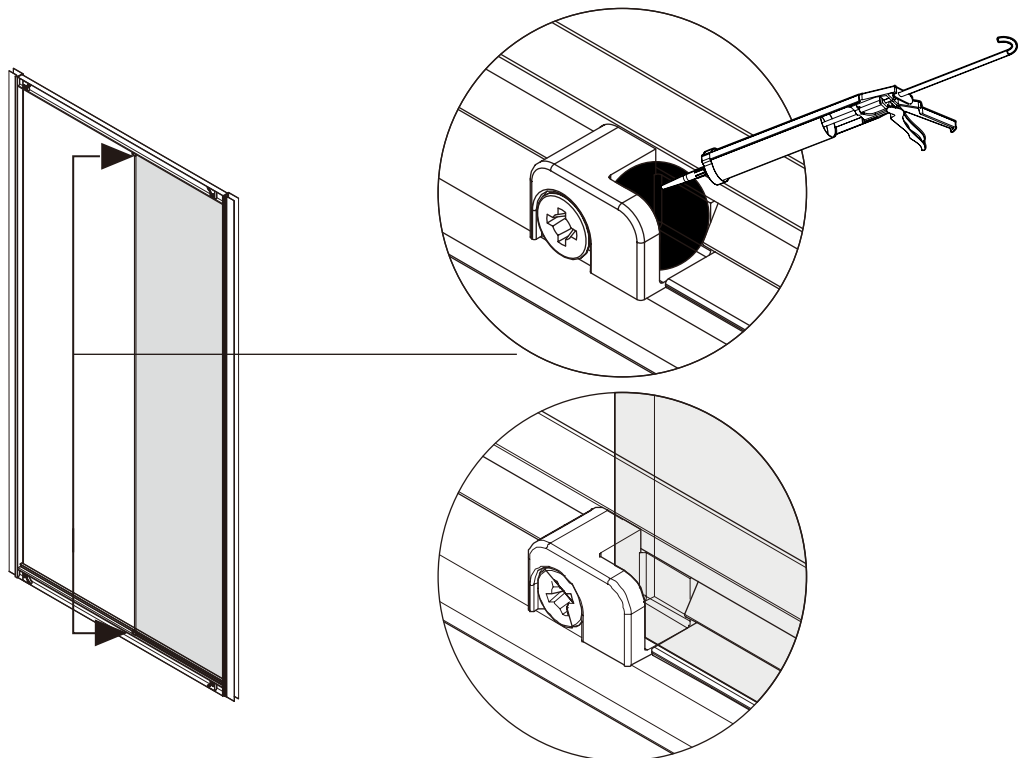
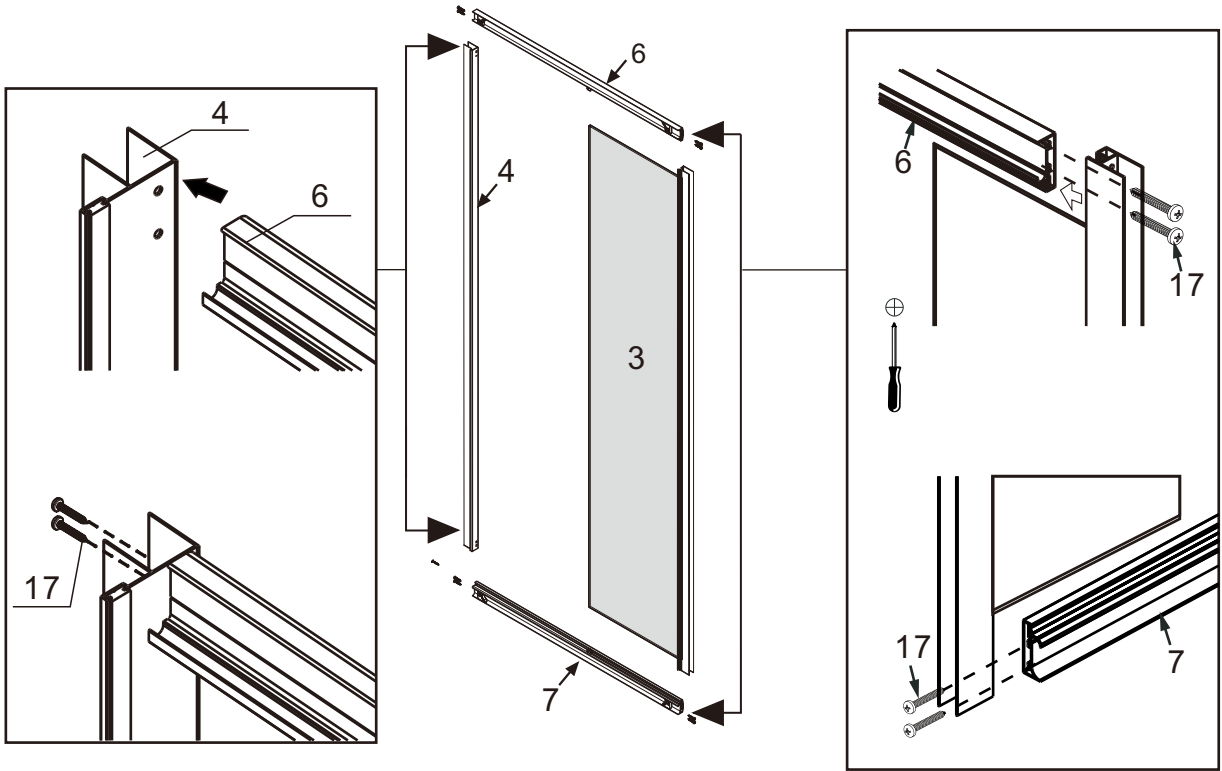


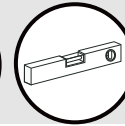
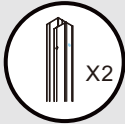
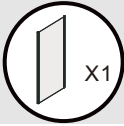


4

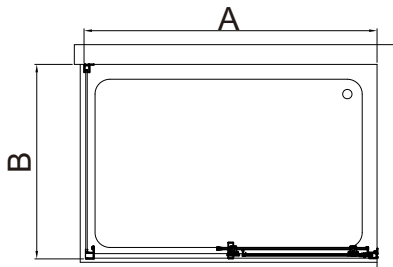
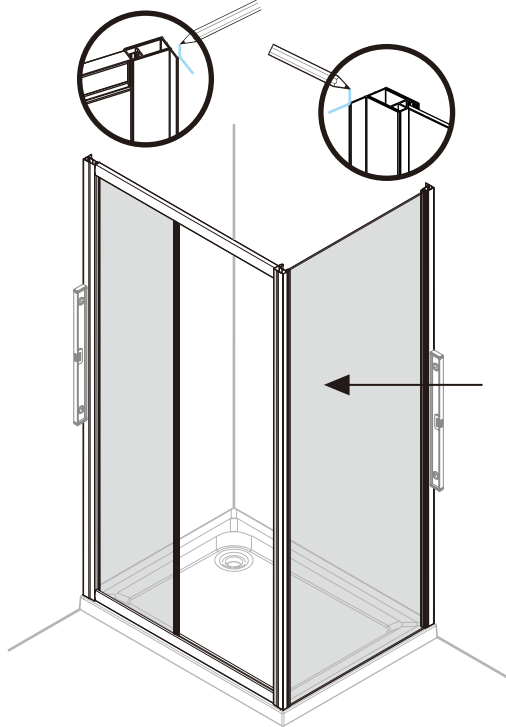



Size(mm)	A	B
1000x800	985-1000	785-800
1100x800	1085-1100	785-800
1200x800	1185-1200	785-800
1300x800	1285-1300	785-800
1400x800	1385-1400	785-800
1500x800	1485-1500	785-800
1000x900	985-1000	885-900
1100x900	1085-1100	885-900
1200x900	1185-1200	885-900
1300x900	1285-1300	885-900
1400x900	1385-1400	885-900
1500x900	1485-1500	885-900
1000x1000	985-1000	985-1000
1100x1000	1085-1100	985-1000
1200x1000	1185-1200	985-1000
1300x1000	1285-1300	985-1000
1400x1000	1385-1400	985-1000
1500x1000	1485-1500	985-1000

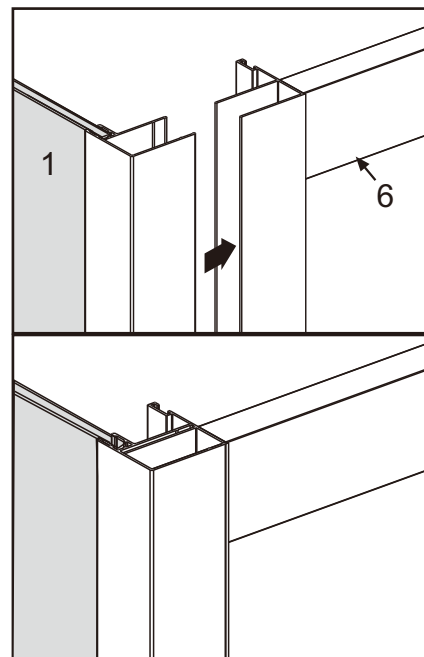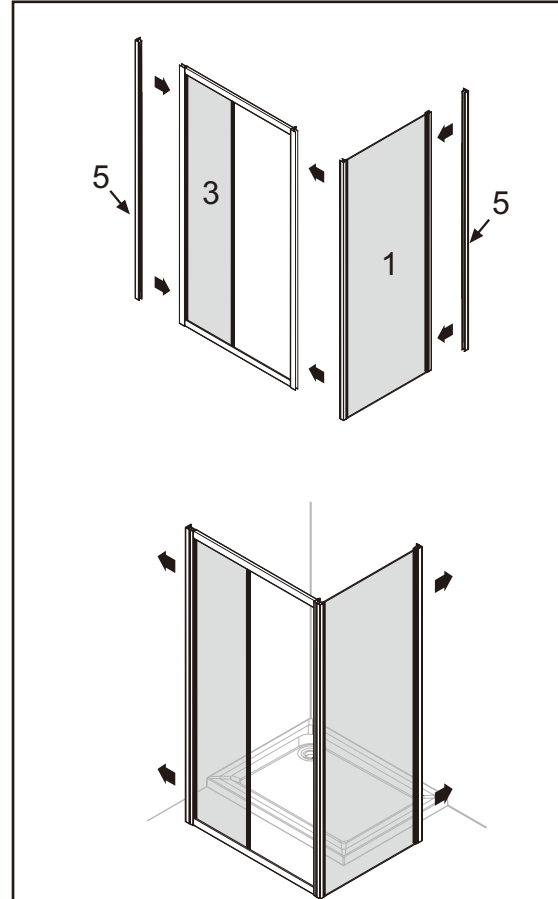

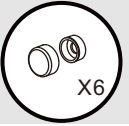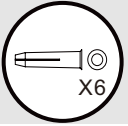
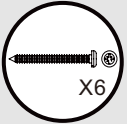






5

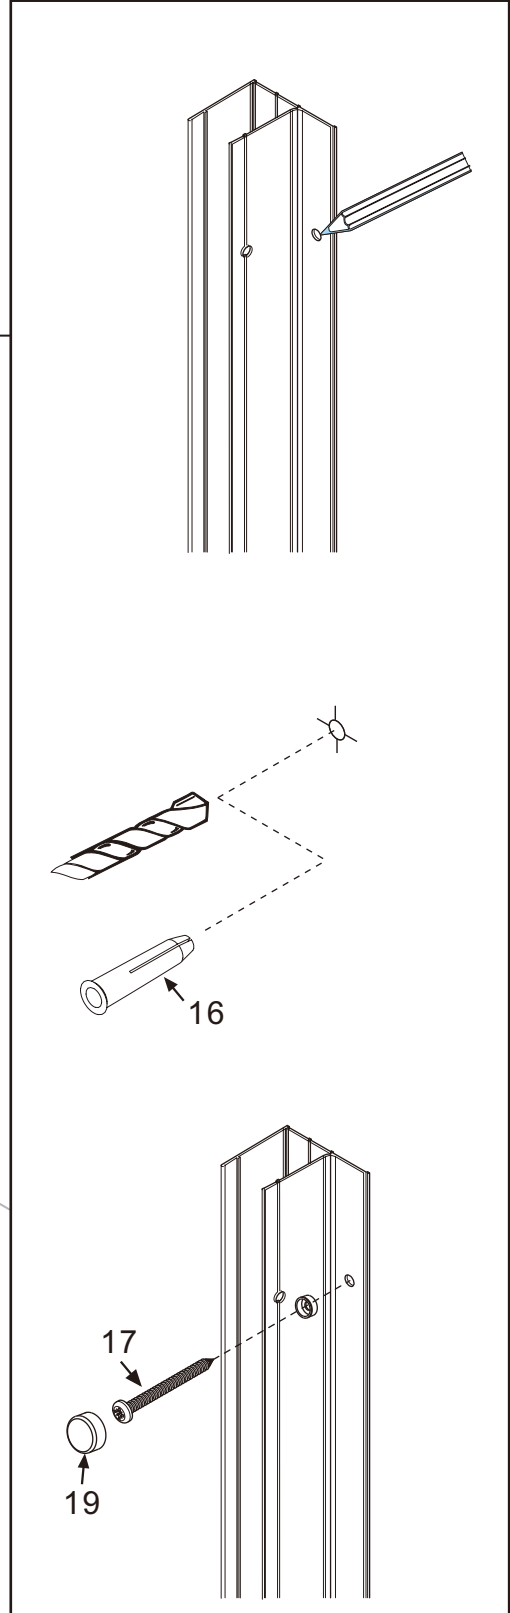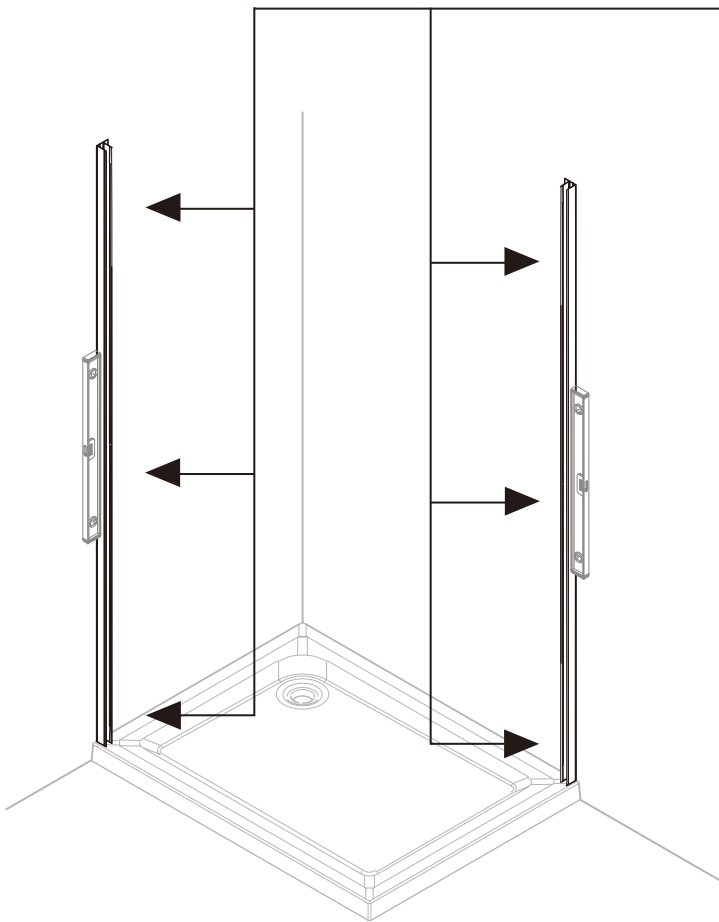





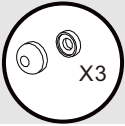




6

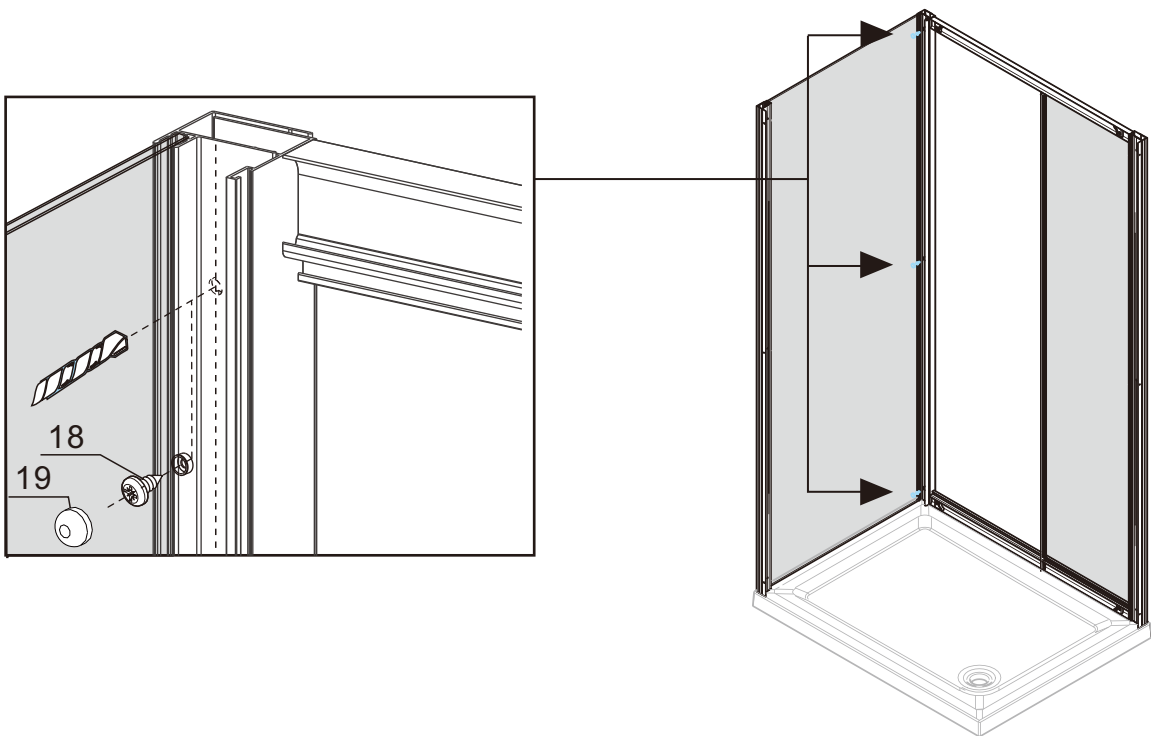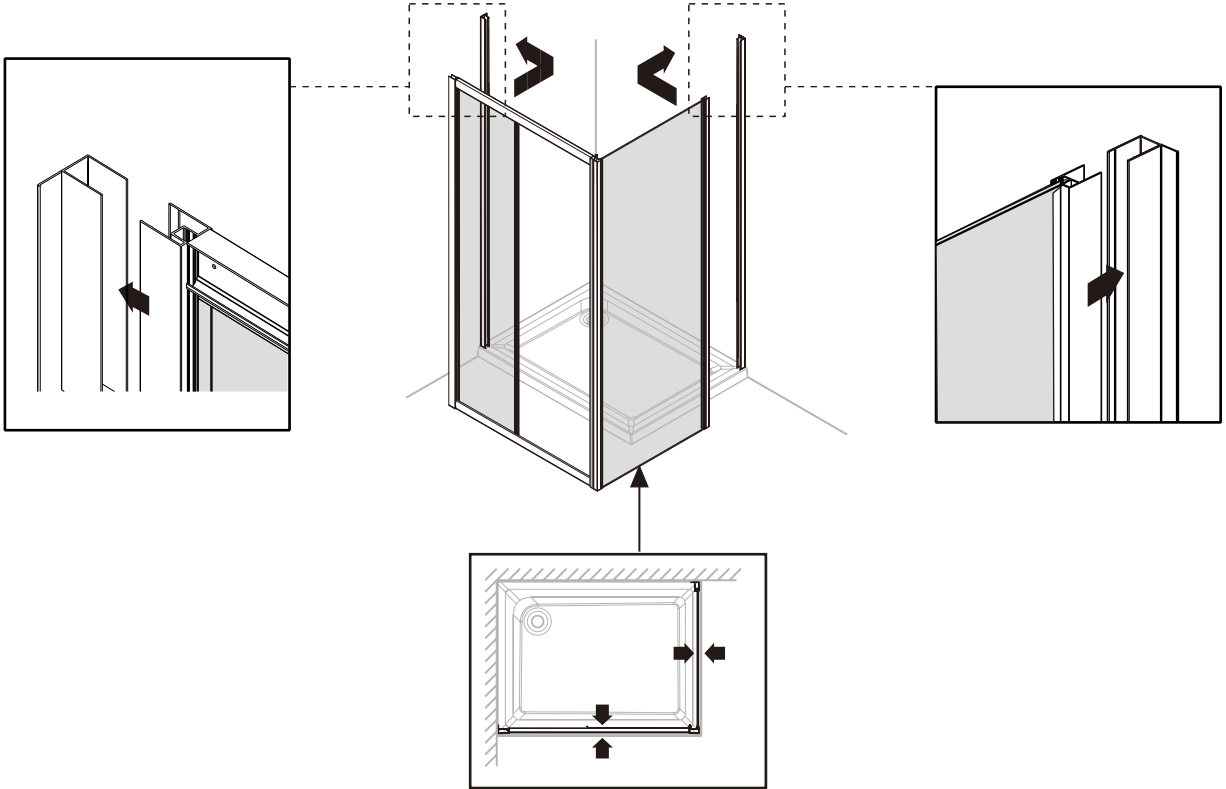

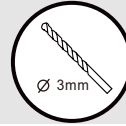
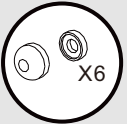
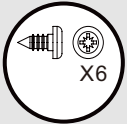
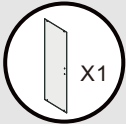


7

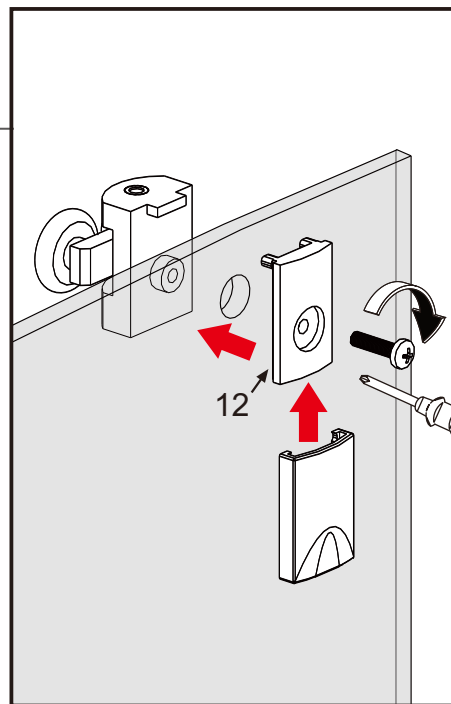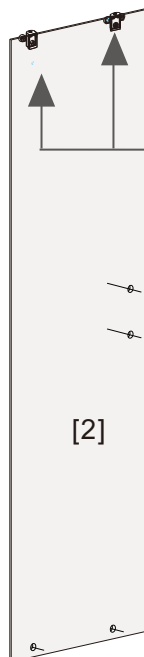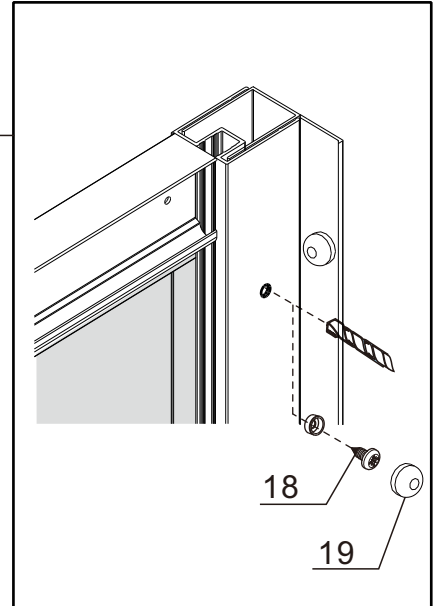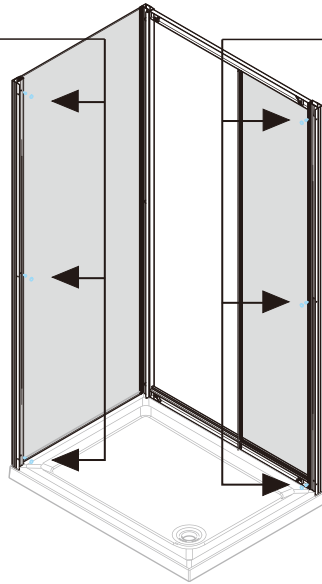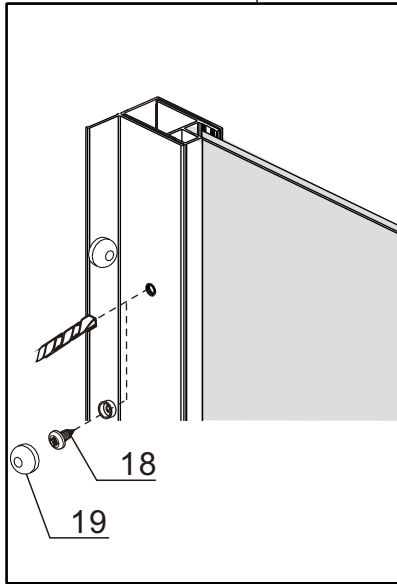

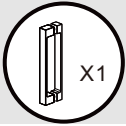
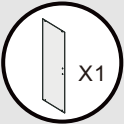


8

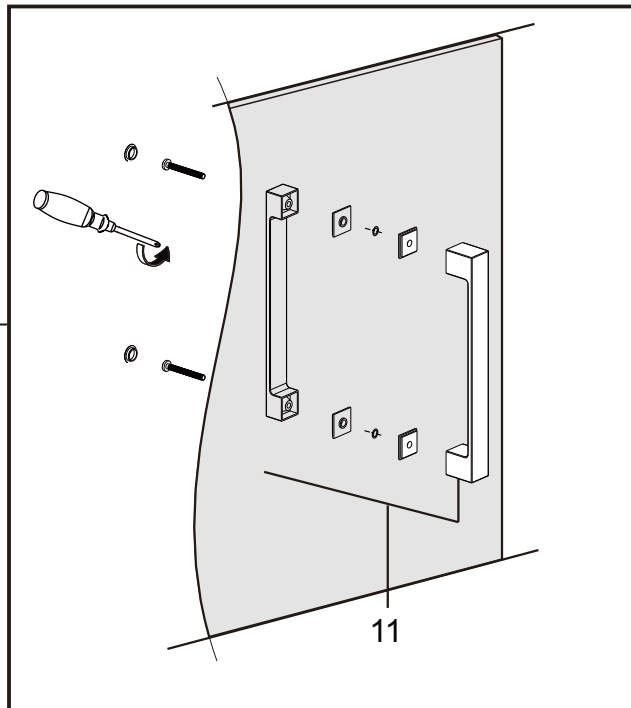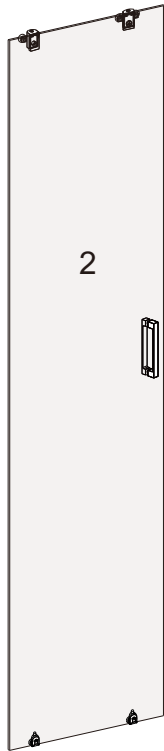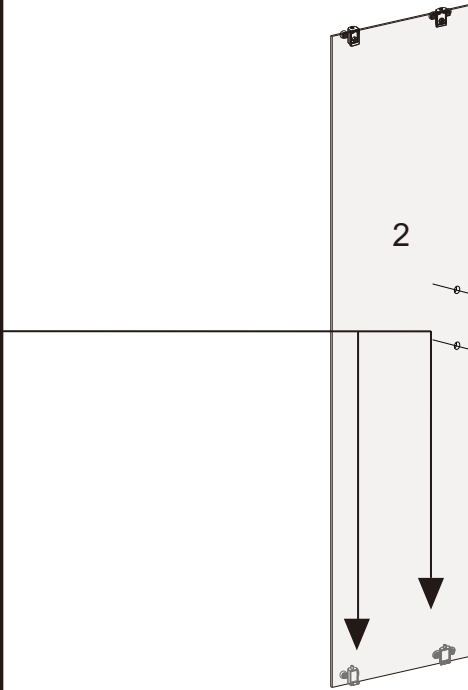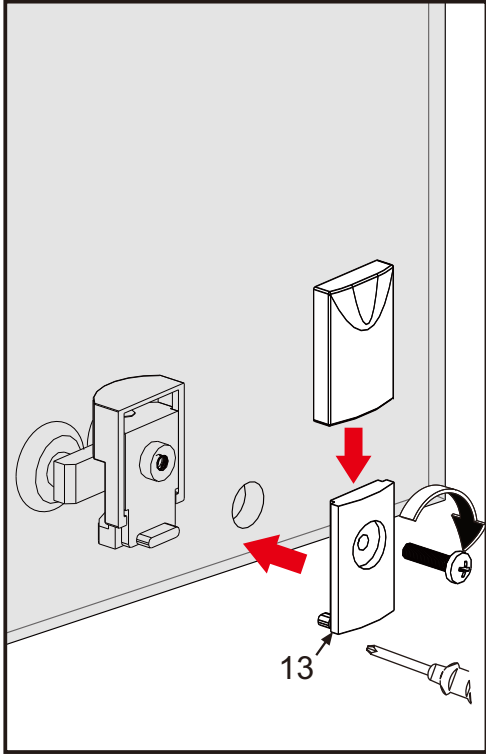








9

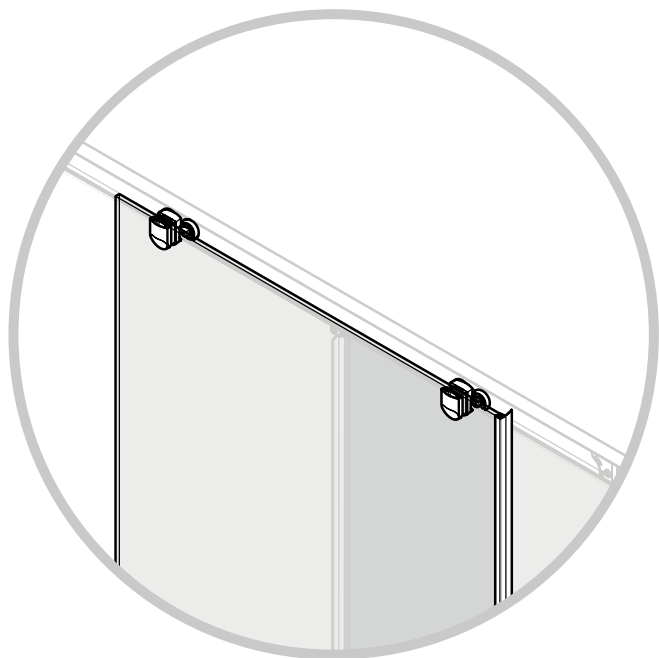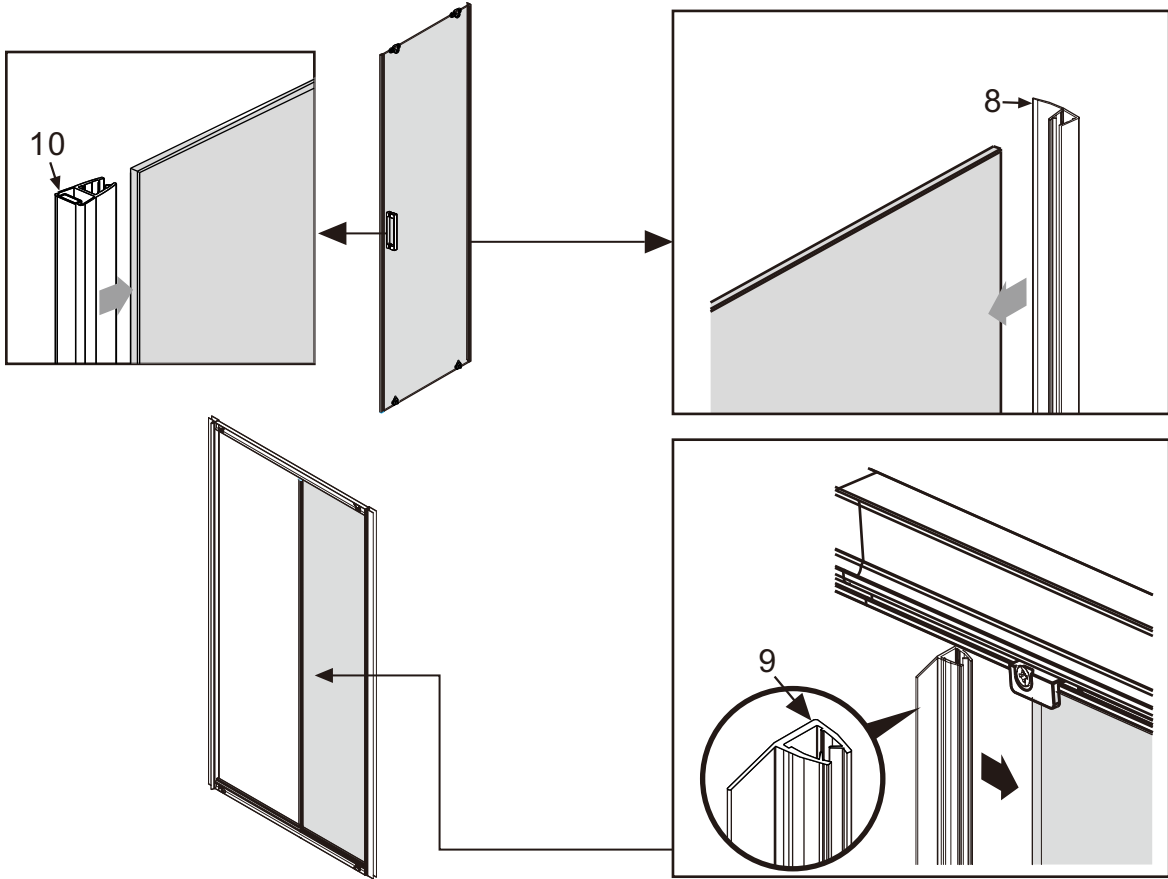




10

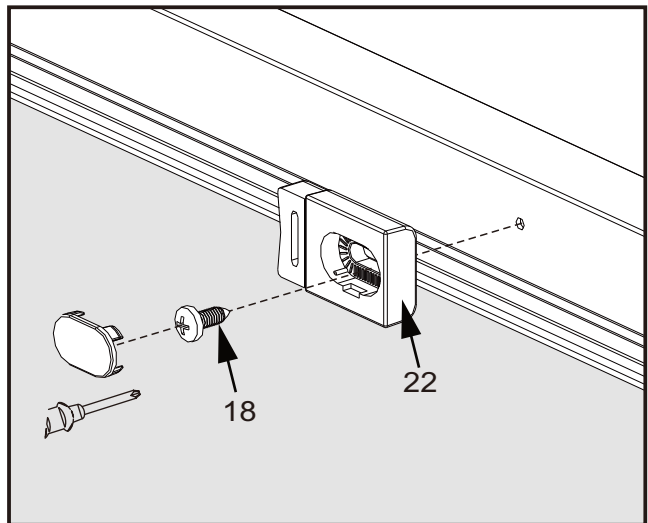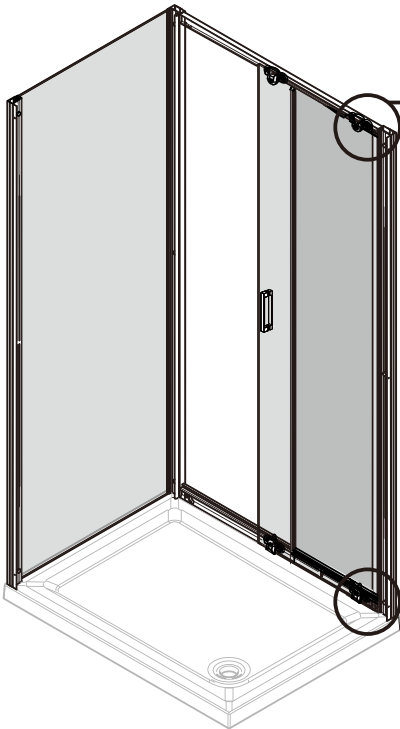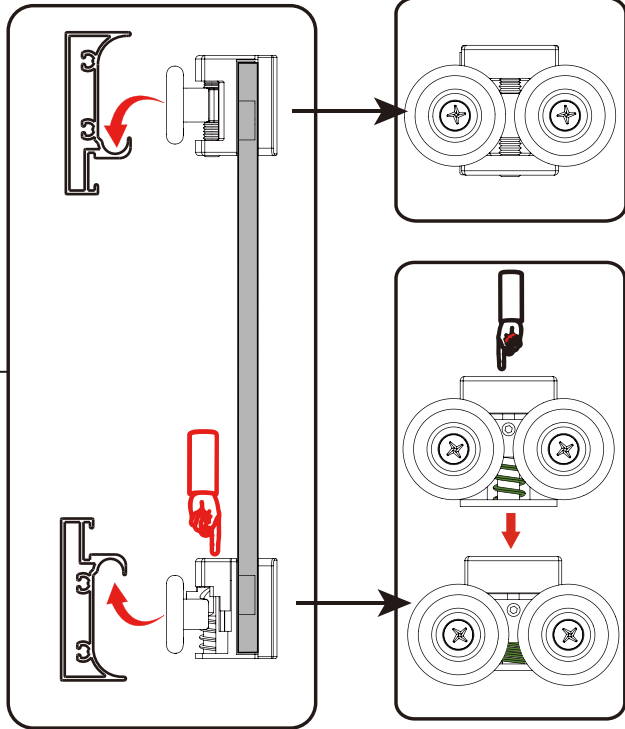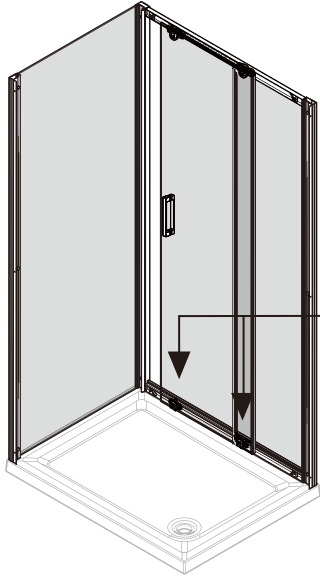


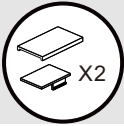


11

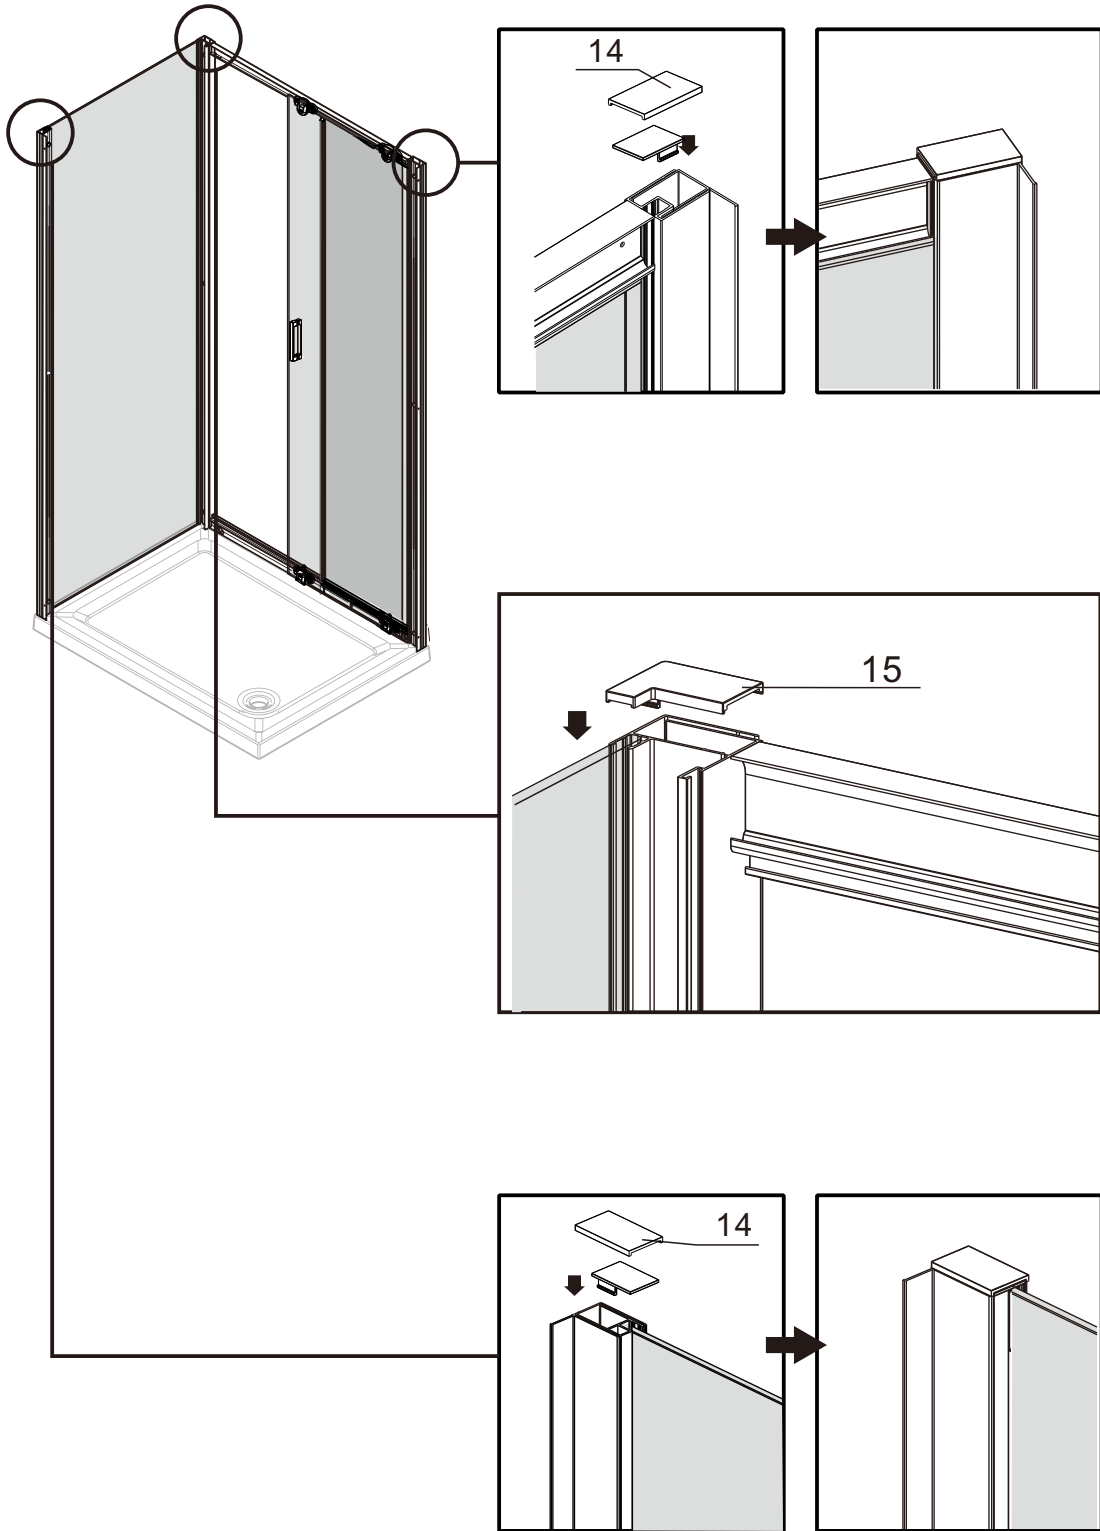



12

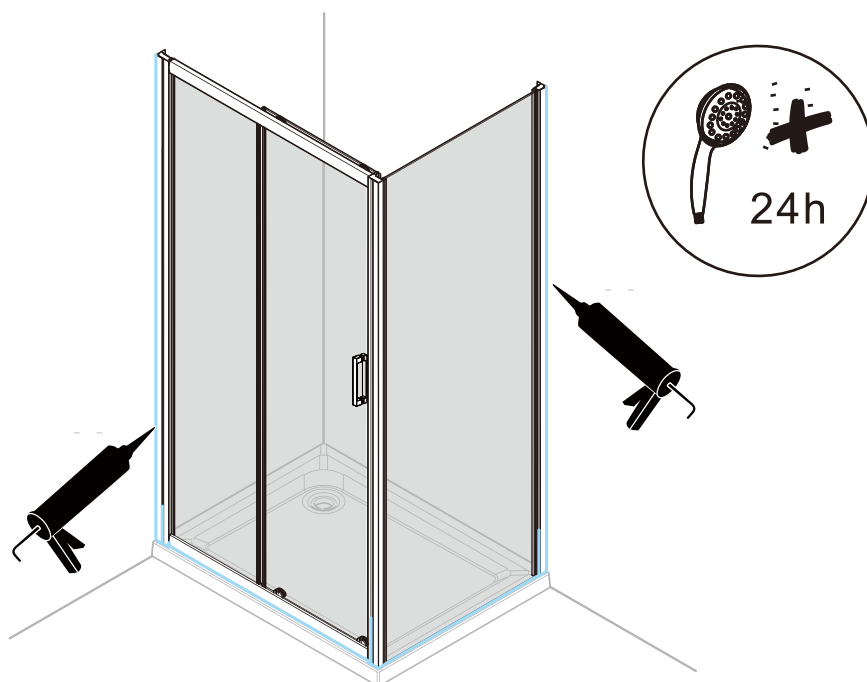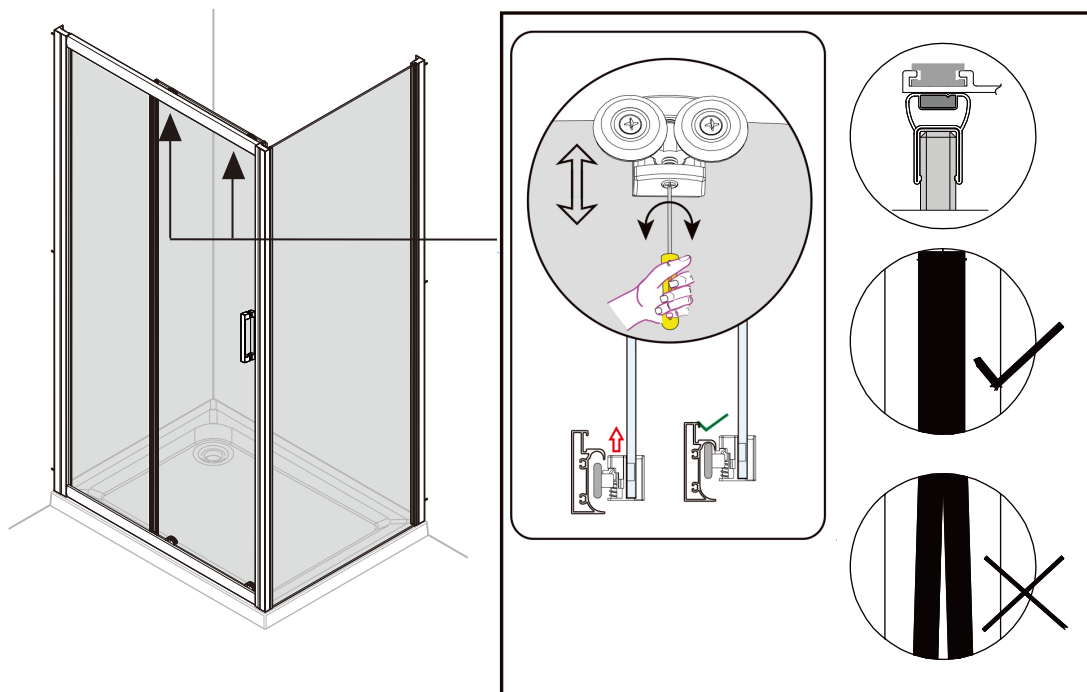

RU Не используйте душевое ограждение по крайней мере 24 часа, чтобы дать полностью застыть силиконовому герметику